 


# Service Manual



**ORDER NO.  
CRT 1153**

**BMW ANTI-THEFT CD-READY RADIO**

# KE-83ZBM US

**Note :**

- See the separate manual CX-156 (CRT-468) for the cassette mechanism description.
  - Dolby and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.
  - Noise Reduction System manufactured under license from Dolby Laboratories Licensing Corporation.
- BMW No. 88 88 1 600 183

## SPECIFICATIONS

### TUNER

#### FM Receiver

Usable Sensitivity (Load)	1 $\mu$ V
[30 dB (N + D)/(S + N + D)]	
Signal/Noise Ratio (1 mV)	65 dB
Overload Signal	1 V
AM Rejection	40 dB
IF Rejection	100 dB
Image Rejection	50 dB
Spurious Rejection	70 dB
Alternate Channel Selectivity	60 dB
Capture Ratio	2 dB
Stereo Separation (1 kHz)	40 dB
Stereo Distortion (1 mV)	0.5%
Frequency Range	87.9 to 107.9 MHz
Intermediate Frequency	10.7 MHz

#### AM Receiver

Usable Sensitivity	10 $\mu$ V
[20 dB N/(S + N)]	
Signal/Noise Ratio (5 mV)	50 dB
Selectivity ( $\pm 10$ kHz)	100 dB
IF Rejection	100 dB
Image Rejection	60 dB
Distortion (5 mV RF)	0.5%
Frequency Range	530 to 1620 kHz
Intermediate Frequency	450 kHz

#### WB Receiver

Usable Sensitivity (Load)	0.3 $\mu$ V
[20 dB (S + N)/(S + N + D)]	

Signal/Noise Ratio (1 mV)	55 dB
Distortion	1.5%
Frequency Range	162.400 to 162.550 MHz (25 kHz Step)

Intermediate Frequency	
1st I.F.	10.7 MHz
2nd I.F.	450 kHz

#### Cassette Deck

Wow and Flutter WRMS — JIS	0.07%
Signal/Noise Ratio	50 dB
Dolby NR Effect	10 dB
Separation	50 dB
Cross Talk	55 dB
Distortion	1%

Frequency Response ( $-3$ dB)	
Normal	40 Hz to 15 kHz
Metal	40 Hz to 18 kHz

#### Audio Control

Tone Control Response	
Treble Boost/Cut	10 kHz $\pm 10$ dB
Bass Boost/Cut	100 Hz $\pm 10$ dB

#### Power Amplifier

Power Output ( $R_L = 4 \Omega$ , $V_{CC} = 14.4$ V)	
10% THD	5.5 W/Ch
1% THD	4.5 W/Ch
THD ( $R_L = 4 \Omega$ , $V_{CC} = 14.4$ V)	
$P_o = 1$ W	0.7%
Frequency Response	
( $\pm 3$ dB)	20 Hz to 40 kHz
Signal/Noise Ratio	65 dB

NOTE: Specifications are subject to change without notice.

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan  
**PIONEER ELECTRONICS SERVICE INC.** P.O. Box 1760, Long Beach, California 90801 U.S.A.  
**PIONEER ELECTRONICS OF CANADA, INC.** 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada  
**PIONEER ELECTRONIC [EUROPE] N.V.** Keetberglaan 1, 2740 Beveren, Belgium  
**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.** 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911

## CONTENTS

1. PROTECT YOUR RADIO FROM THEFT .....	1	8. INNER CONNECTIONS OF LCD (CWW 1157) .....	12
2. USING THE RADIO .....	2	9. SCHEMATIC CIRCUIT DIAGRAM .....	24
3. USING THE TAPE DECK .....	3	10. CONNECTION DIAGRAM .....	28
4. DISASSEMBLY .....	5	11. CASSETTE MECHANISM EXPLODED VIEW .....	32
5. CONNECTOR TERMINAL FUNCTIONS .....	7	12. CHASSIS EXPLODED VIEW .....	36
6. BLOCK DIAGRAM .....	8	13. ELECTRICAL PARTS LIST .....	39
7. ADJUSTMENT .....	10	14. PACKING METHOD .....	43
		15. CD MODE CONTROL LOCATION AND OPERATION (WITH CD CHANGER OPTION) .....	44

## 1. PROTECT YOUR RADIO FROM THEFT

Your BMW radio will not operate once it is removed from the console, making it virtually useless to a thief. The only way to restore power to the radio once it is removed is to enter a five-digit security code unique to your radio. The anti-theft features of your radio operate as follows:

1. When the ignition key is removed, the red anti-theft LED indicator will flash continuously.
2. If any buttons on the radio are touched after the key is removed, a warning tone will sound for five minutes or until the ignition is turned on. The anti-theft indicator will also flash.
3. A dead battery, electrical repairs, radio removal or reduction of voltage supply to less than a preset value will render the radio inoperable until voltage is restored and the security code is entered. The radio must be turned on before the code is entered. The word "code" will show on the display.
4. To enter your security code, which can be found on the two cards supplied to you by BMW, turn the radio on and use the appropriately numbered radio push-button selectors.

If the correct code is not entered in three successive tries, the radio will not accept another entry until it has been left on for one hour.

5. Do not leave the code cards in your car. Place them in your wallet or with your vehicle title papers for security. If you lose the code cards, contact the nearest BMW dealer. He will get your code from BMW. There may be a charge for removing the radio to ascertain its chassis number.
6. If radio or electrical repairs become necessary, please give the repair facility your radio code number. If you do not, only authorized BMW personnel can obtain the code from BMW.

**Important:** If you make a mistake in entering your code, complete the entire sequence before entering the correct code. For example, if your code is 12345, and you mistakenly enter 125, finish the five-digit sequence (45) to complete that entry. The radio will not operate, and the word "code" will again appear on the display. Enter the correct code at this time.

**Exception:** If you hear a beep when entering your code, stop immediately! Begin entering the code again, starting with the first digit.

**WARNING:** FOR YOUR PROTECTION, CODES WILL **NOT** BE GIVEN OUT TO ANYONE—UNDER ANY CIRCUMSTANCES—EXCEPT AUTHORIZED BMW DEALER PERSONNEL AFTER PROOF OF VEHICLE OWNERSHIP AND PROPER IDENTIFICATION IS ESTABLISHED.

## 2. USING THE RADIO

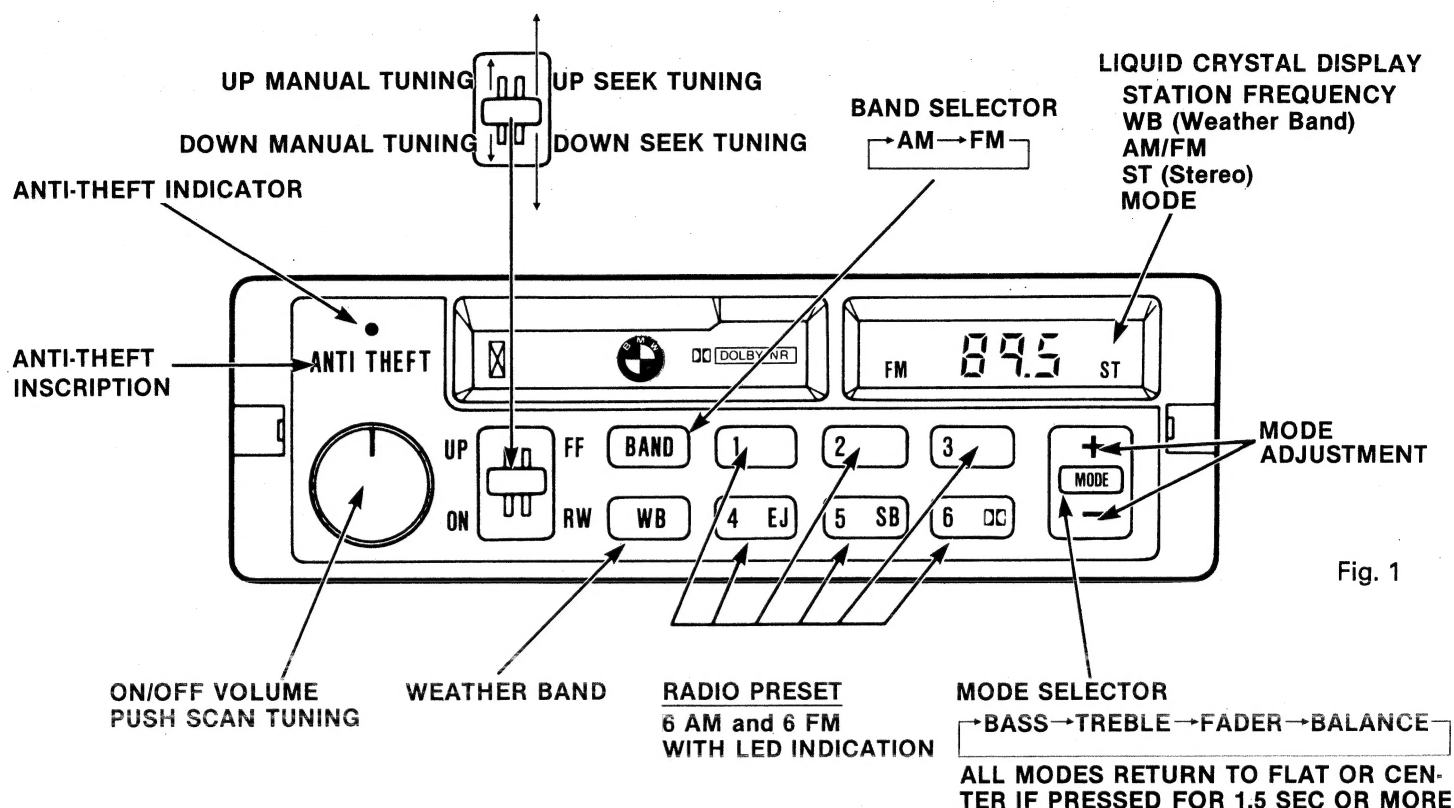


Fig. 1

### AM/FM

Press the BAND button and AM or FM will appear on the display indicating which band is being received. When AM or FM is chosen, the currently tuned frequency is also displayed. Press the button to change from band to band.

### WEATHER BAND (WB) AUTOMATIC FREQUENCY SELECTION

When the WB button is pressed, regardless of what source you are currently listening to, weather band seek tuning begins automatically and finds the strongest broadcast frequency. If the broadcast frequency in your area is too weak, or nonexistent, a beep will sound after the WB frequencies have been run through three times. If you press the WB button again, the radio returns to the previous source.

### AUTOMATIC LOCAL/DISTANCE SWITCHING

New electronic circuitry automatically selects the local/distance mode for best reception, eliminating the need for manual switching.

### MANUAL/SEEK TUNING

The TUNING LEVER is used for both manual and seek tuning. For manual tuning, raise or lower the lever one step—up for higher frequencies, down for lower frequencies. For seek tuning, raise or lower the lever as far as it will go. The unit will automatically tune and lock onto the next higher or lower receivable broadcast frequency.

### STEREO

The ST indicator will light up on the display whenever a stereo station is received. The indicator will flash when signal strength diminishes.

### PRESET STATION INDICATORS WITH LED

Each PRESET button has a built-in LED. When a PRESET button is pushed, the LED will change from orange to green, indicating selection of that preset frequency.

SCAN TUNING

Signal scan tuning allows you to tune into each medium-to-strong frequency pausing seven seconds at each. Push the ON/OFF button once to begin tuning up scale, and press it again during a pause to stop the scanning.

FM RECEPTION

Signal reflections or blockages caused by hills or tall buildings may cause hissing and fluttering noises in FM reception. FM signal strength diminishes beyond 25 miles from the transmitter.

BASS, TREBLE, FADER AND BALANCE CONTROL

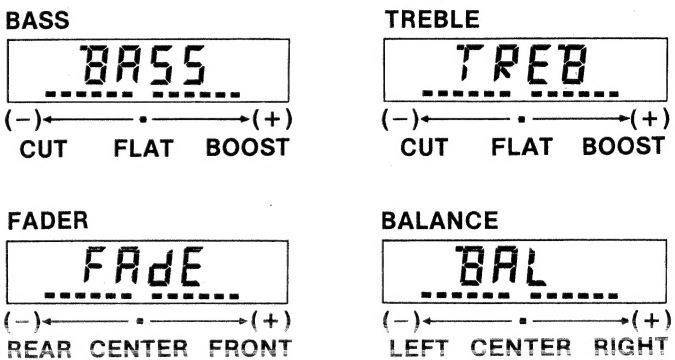
Each time the MODE button is pressed, control of bass, treble, fader, or balance is selected in turn. The selected mode is shown on the display and can be adjusted by the + and - buttons. About five seconds after adjustment, the display returns to its previous state.

When the MODE button is pressed continuously for more than 1.5 seconds, the level of each mode returns to flat or center. At this time a beep is sounded and "FLAT" is displayed on the display.

PROGRAMMING/REPROGRAMMING PRESET STATIONS

Tune in the desired radio station. Then push a PRESET selection button for 1.5 seconds. When you hear a beep, the frequency has been memorized. Repeat this procedure for the remaining preset station selectors on the AM and FM bands.

**NOTE:** The radio programming controls have dual functions. Each button can be set to one AM and one FM station.



3. USING THE TAPE DECK

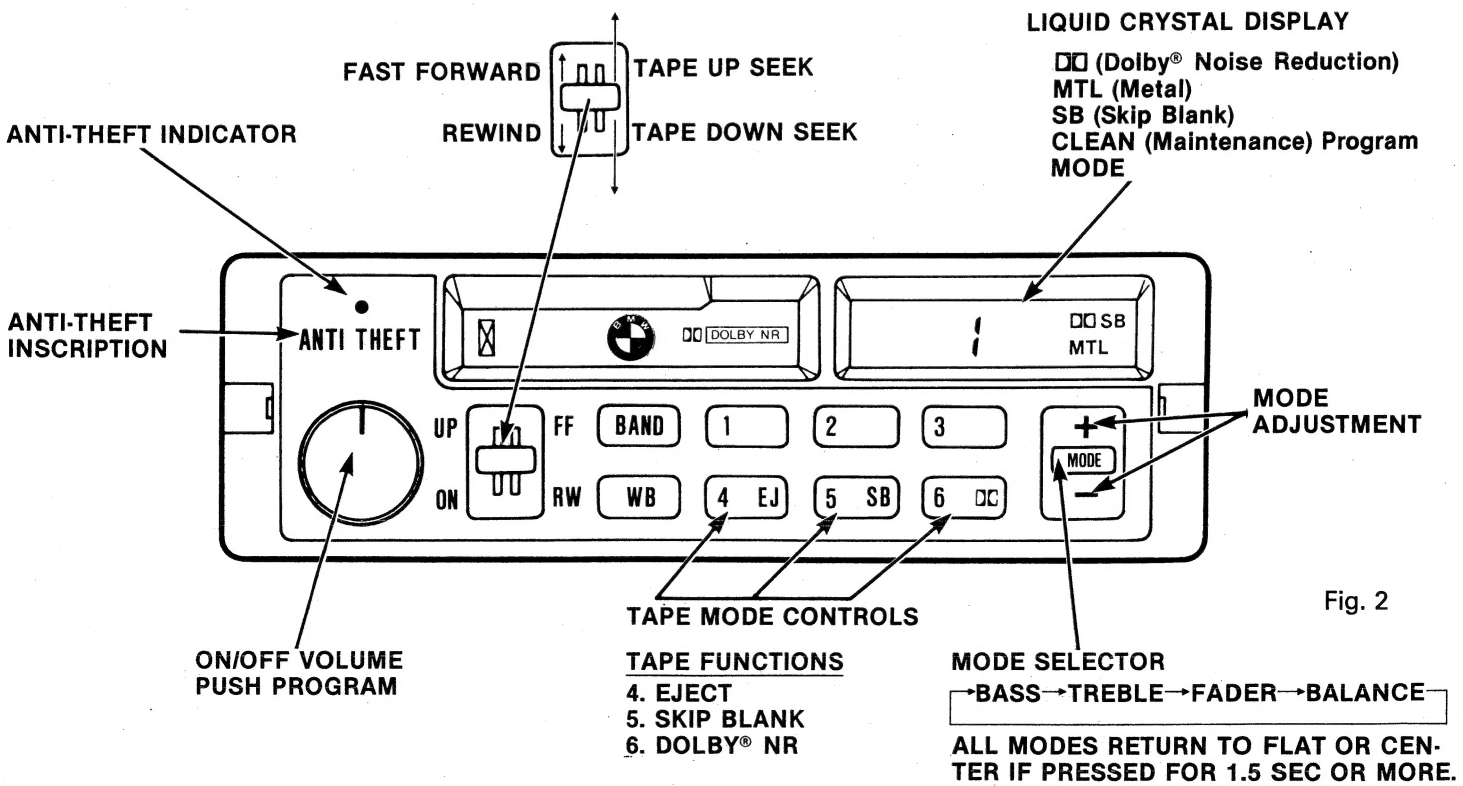


Fig. 2



## CASSETTE OPERATION

To use the cassette player, turn the radio on. When a cassette is inserted, the unit will switch automatically from radio to tape mode.

## FAST FORWARD/REWIND

The FF/RW lever has a two-step operation. Raise the lever one step to fast forward; lower it one step to rewind. Repeat the same action to stop the appropriate function. The logic circuitry in your radio will automatically determine the right direction for fast forward or rewind.

A standard cassette has two sides and can be played in either direction. When in play, the top side of a cassette will be indicated as "1" on the display. The bottom side will appear as "2".

## TAPE SEEK

Raising or lowering the fast forward/rewind (FF/RW) lever two steps (as far as it can go) activates the seek mode. SEEK will appear on the display. To move to the next selection on your tape, raise the lever as far as it can go. The tape will move rapidly to the next selection. To restart the current selection, lower the lever in the same fashion.

## TAPE EJECT (4 EJ)

Press the EJECT button—4 EJ to eject tape cassette and return to the radio mode.

## SKIP BLANK (5 SB)

The SKIP BLANK button—5 SB—automatically advances the tape to the next recorded portion when a blank section of tape exceeds approximately 12 seconds. When there is a long, unrecorded portion at the end of the tape, the unit advances the tape to the end and then starts to play the other side. When the SKIP BLANK button is pushed, SB will appear on the display. Additionally, SEEK will be displayed while the tape is advancing.

## DOLBY® NOISE REDUCTION (6 DD)

Use the Dolby® \* Noise Reduction function—button 6 DD—to reduce the level of hiss on Dolby® encoded cassettes. If you do not use the Dolby® noise-reduction function with Dolby® encoded tapes, the high-frequency response will be intensified. If you do use this function with non-Dolby® tapes, high-frequency response will be diminished.

\*The word "Dolby" and the double-D symbol are registered trademarks of Dolby Laboratories, Inc.

Tape Seek will only function correctly if there are four seconds of silence between the selections on your tape. Excessive noise between selections on home-recorded tapes may interfere with these functions.

The cassette automatically ejects from the unit if tape setting operations cannot be completed within a few seconds. This may be caused by a faulty or damaged cassette. Determine the cause of the problem or use a different cassette.

## REVERSING TAPE DIRECTION

To reverse tape direction, push the ON/OFF button. The tape will reverse automatically when a side is complete.

## AUTOMATIC EQUALIZATION

The playback equalization of normal tapes differs from that of chrome and metal tapes. When a high-bias tape, including metal, is inserted, the unit will automatically change to the correct equalization level, and MTL will be indicated on the display.

## IGNITION-KEY-OFF PAUSE MODE

If the ignition is turned off while a tape is playing, the unit automatically enters the pause mode. The unit will return to normal play mode when the ignition is turned on. The unit will not accept another cassette when it is in the pause mode.

## AUTOMATIC TAPE SLACK CANCELLER (ATSC)

The automatic tape slack canceller removes any slack in the tape before play to protect the tape and extend its life.

## ROTATING TAPE HEAD

The rotating tape head in your tape cassette player ensures accurate horizontal tape alignment in both directions for optimum sound level reproduction and frequency response.

**NOTE:** The BMW Anti-Theft Radio contains a full-logic computer-controlled 3-motor drive which controls the automatic tape slack canceller (ATSC) and rotating tape head mechanism. During cassette tape loading/unloading or tape transport directional changes, the motor drive emits a precision mechanical sound which indicates normal tape cassette player operation.

## 4. DISASSEMBLY

### ● Removing the Case

1. Remove the screw (A).
2. Insert and turn a flat screwdriver to remove case.
3. Raise case to remove.

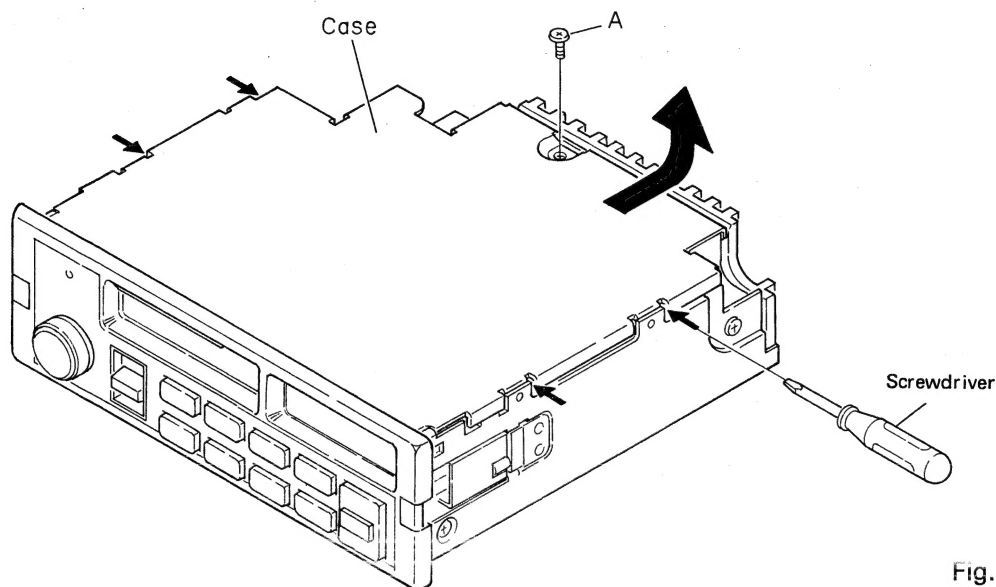


Fig. 3

### ● Removing the Cassette Mechanism Assy

1. Remove the four screws (B)
2. Pull the connector (20P) out while Lifting the Cassette Mechanism Assy straight up.

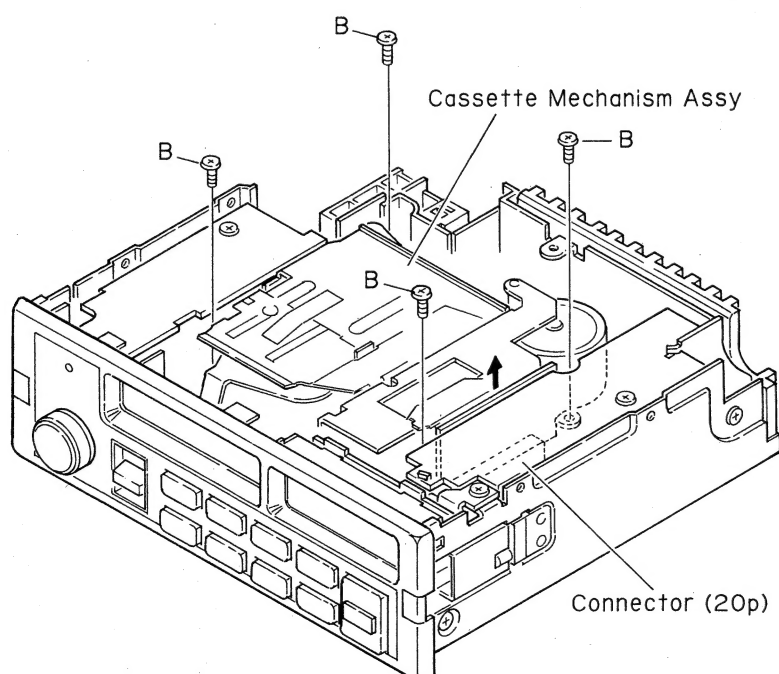


Fig. 4

### ● Removing the Grille Assy

1. Remove the two knobs, and remove the two screws (c).
2. Insert a screwdriver and turn it in the arrow direction, then two connector catches come off and the flexible circuit board can be removed.
3. Remove the two tabs.

### ● Removing the Tuner Amp Unit (4/6)

1. Remove the screw (E).
2. Remove the solder, and stretch the tab.
3. Pull the connector (10P) out while Lifting the Tuner Amp Unit (4/6) straight up.

### ● Removing the Tuner Amp Unit (1/6)

1. Remove the screw (D).
2. Remove the solder, and stretch the two tabs.
3. Pull the connectors (4P, 5P) out while Lifting the Tuner Amp Unit (1/6) straight up.

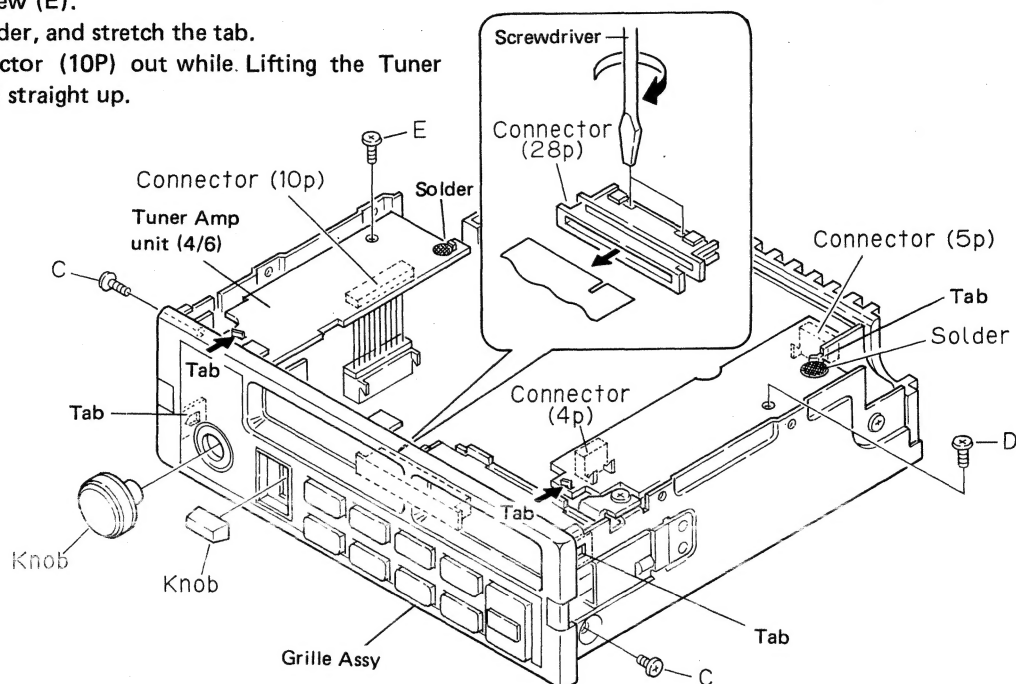


Fig. 5

### ● Removing the LCD Unit

1. Remove the screw (F).
2. Pull the connector (16P) out while Lifting the LCD Unit straight up.

### ● Removing the chassis

1. Remove the four screws (G).

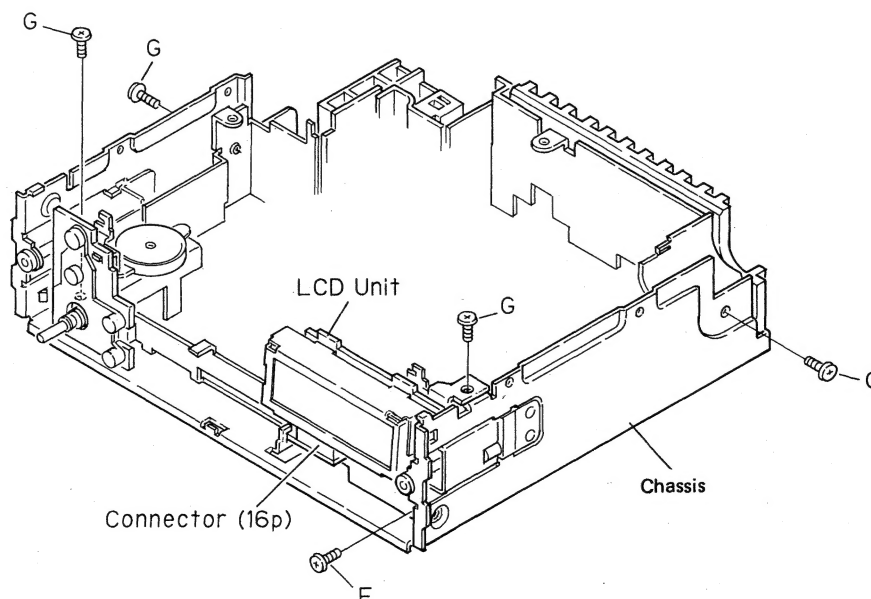


Fig. 6

5. CONNECTOR TERMINAL FUNCTIONS

● Connection Diagram

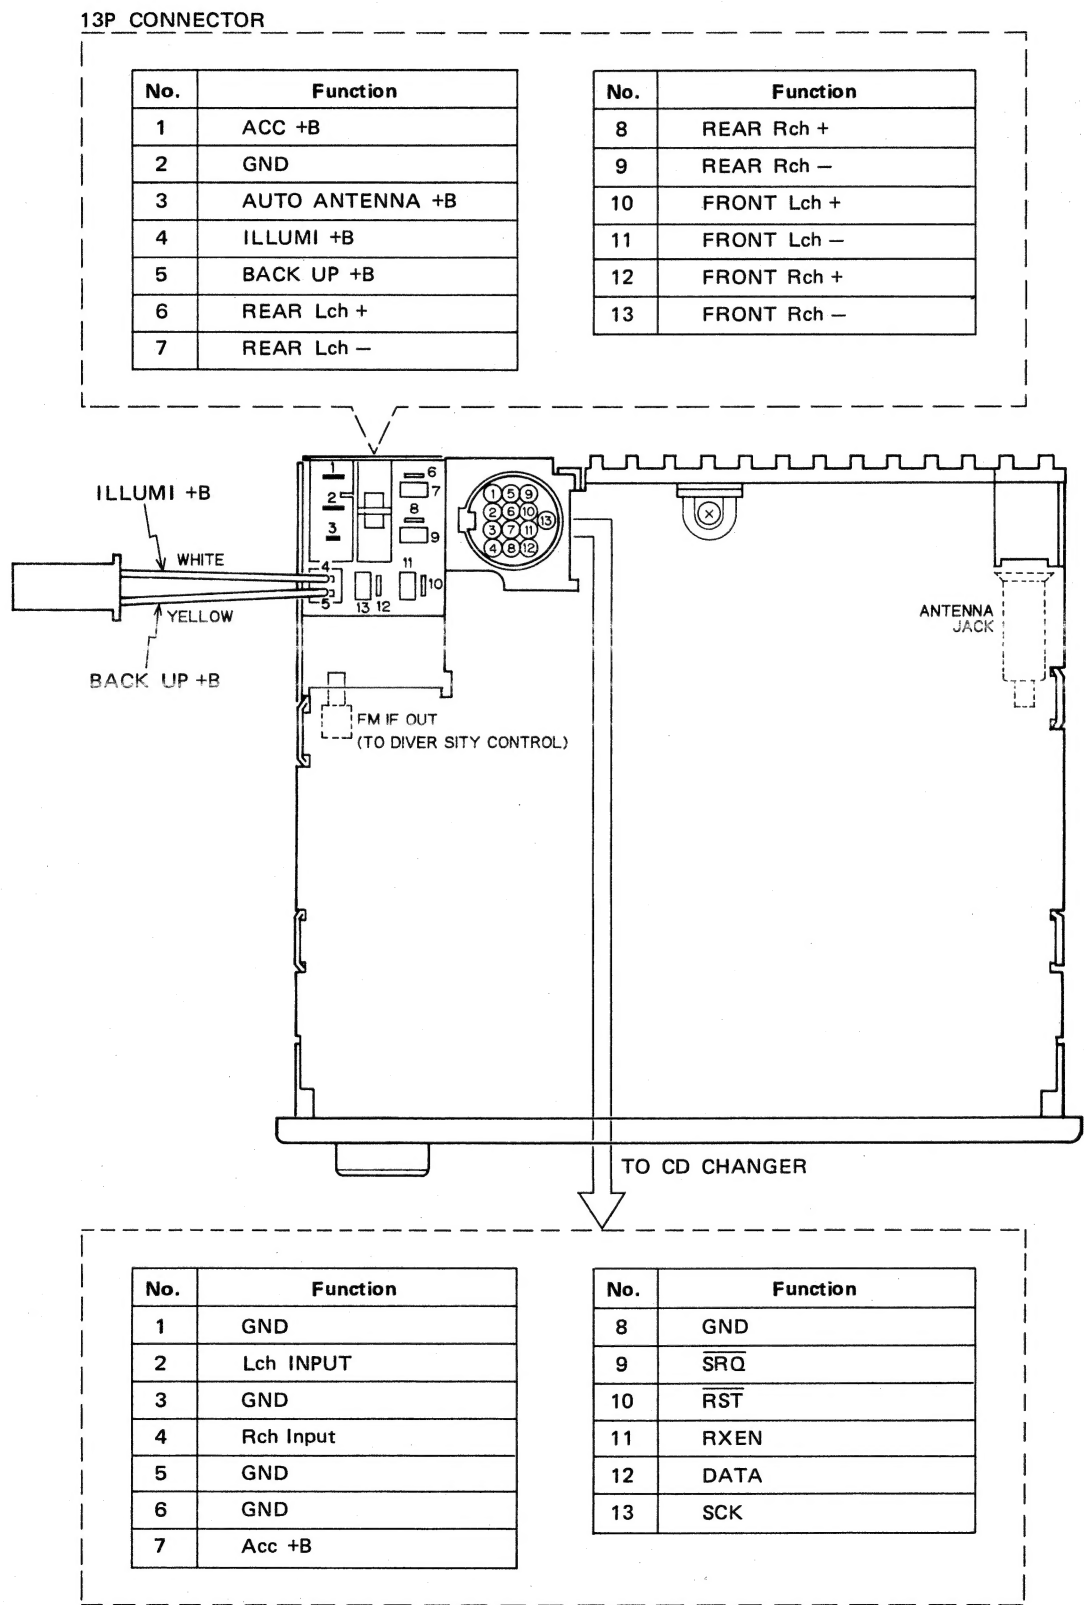


Fig. 7



7. ADJUSTMENT

● Connection Diagram

NOTICE:  
Select C1 so that total capacity of 80pF attained from the direction of the receiver jack.  
Z: Output impedance of SSG.

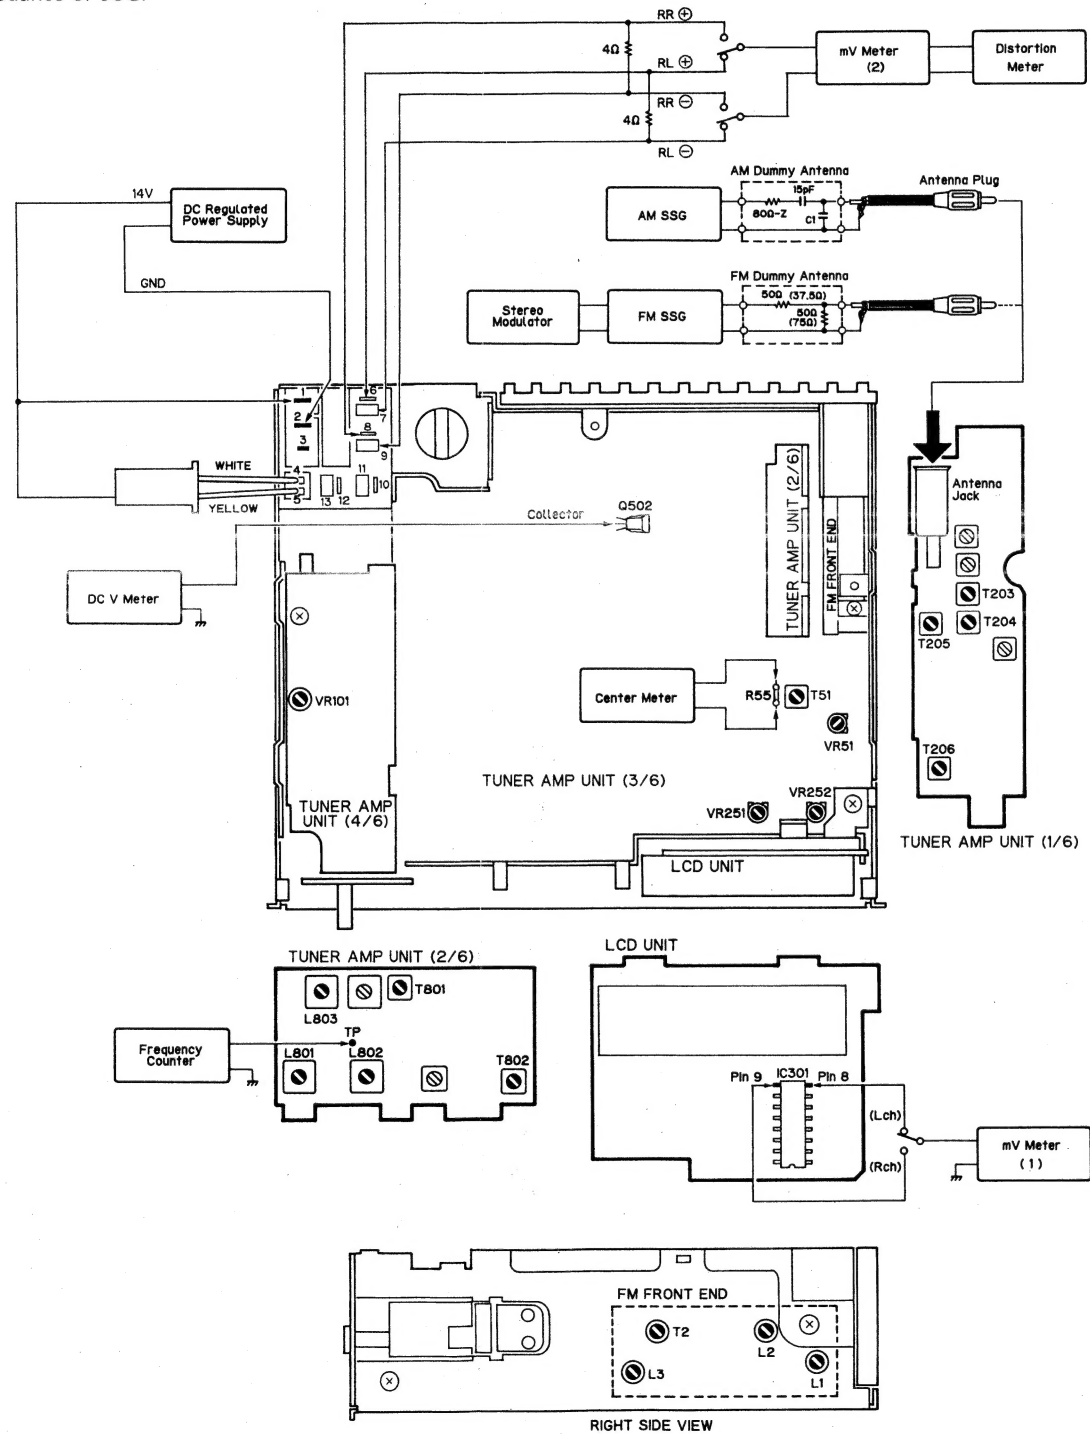


Fig. 9

7. 1 DOLBY NR LEVEL ADJUSTMENT

No.	Cassette Tape	Adjusting Point	Adjustment Method (Switch Position)
1	NCT-150 (400Hz, 200nwb/m)	VR251 (Lch), VR252 (Rch)	mV Meter (1): 245mV ± 1dB (245mV = -10dBs) (DOLBY NR Switch: OFF)

7. 2 AM ADJUSTMENT

	No.	AM SSG (400Hz, 30%)		Displayed Frequency (kHz)	Adjusting Point	Adjustment Method (Switch Position)
		Frequency (kHz)	Level (dB)			
Tuning Volt	1			1,620	—	DC V Meter: Less than 8.0V
	2			530	—	DC V Meter: More than 0.8V
Tracking	1	600	20	600	T203, T204, T205, T206	mV Meter (2): Maximum
	2	600 1,000 1,400	35	600 1,000 1,400	—	The difference between the maximum and minimum output levels at 600kHz, 1,000kHz and 1,400kHz must be 6dB or less.

7. 3 FM ADJUSTMENT ※ Stereo MOD.: 1kHz, L+R = 90%, Pilot = 10%

	No.	FM SSG (400Hz, 100%)		Displayed Frequency (MHz)	Adjusting Point	Adjustment Method (Switch Position)
		Frequency (MHz)	Level (dB)			
IF	1	98.1 Unmodulated	60	98.1	T51	Center Meter: 0
Tracking	1	107.9	10	107.9	L3	DC V Meter: 7.0V ± 0.1V
	2	87.9	10	87.9	—	DC V Meter: More than 1.5V
	3	90.1	10	90.1	L1, L2	mV Meter (2): Maximum
	4	98.1	10	98.1	T2	mV Meter (2): Maximum
MPX	1	98.1※	60	98.1	VR101	mV Meter (2): Best separation
ARC	1	98.1※	35	98.1	VR51	mV Meter (2): Separation 5dB



## 7. 4 WB ADJUSTMENT

	No.	FM SSG(400Hz,100% )		Displayed Frequency (MHz)	Adjusting Point	Adjustment Method (Switch Position)
		Frequency(MHz)	Level (dB)			
WB	1			CH-3/WB	L803	Frequency Counter: 151.775MHz NOTE:After adjusting L803, disconnect frequency counter
	2	162.400	60	CH-2/WB	Volume control knob	mV Meter (2):10dBs
	3	162.400	60	CH-2/WB	T802	Distortion Meter:Minimum
	4	162.475	10—15	CH-3/WB	L801,L802	mV Meter (2):Maximum
	5	162.475	10—15	CH-3/WB	T801	mV Meter (2):Maximum

## 8. INNER CONNECTIONS OF LCD (CWW 1157)


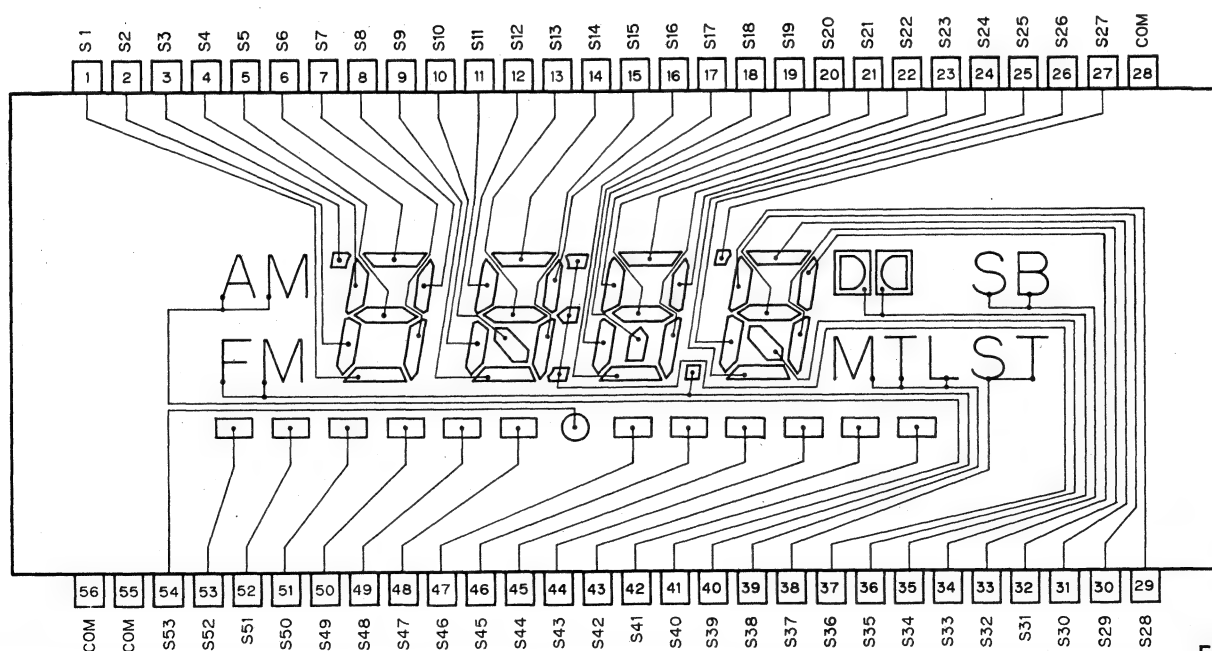


Fig. 10

## • ICs and Transistors

 2SK241



2SD1276



2SC2753  
2SC2570



 
2SK435




2SC2458  
2SC1740S  
2SB808




2SK330



2SC3665

 


2SC2786

 


2SD1930




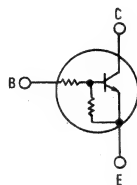
UN4212



DTC124ES

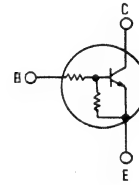


DTA144ES

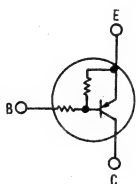
 


## • FM Front End

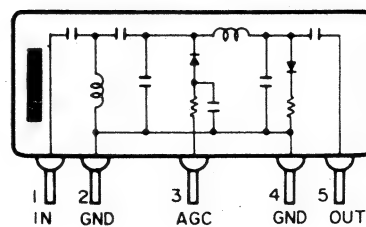IC1: CWW1015  
(CWW-173)




UN4113

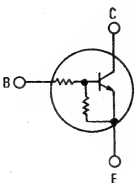 


IC2: PA4009

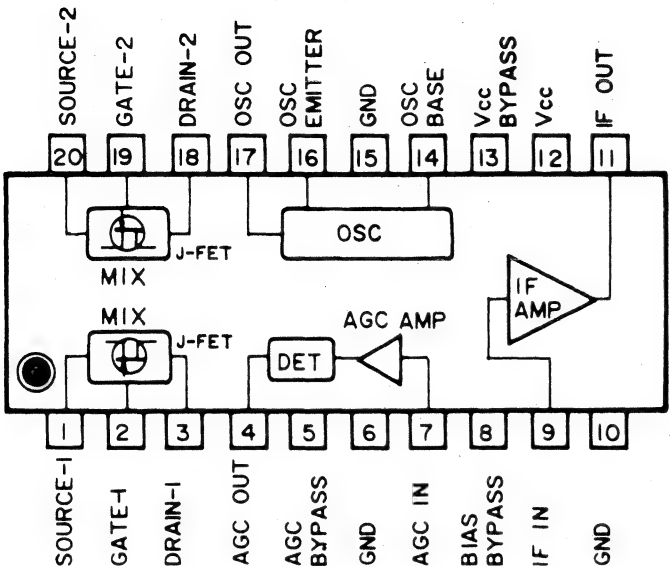
- **Tuner Amp Unit**




**IC52: AN78M12R**

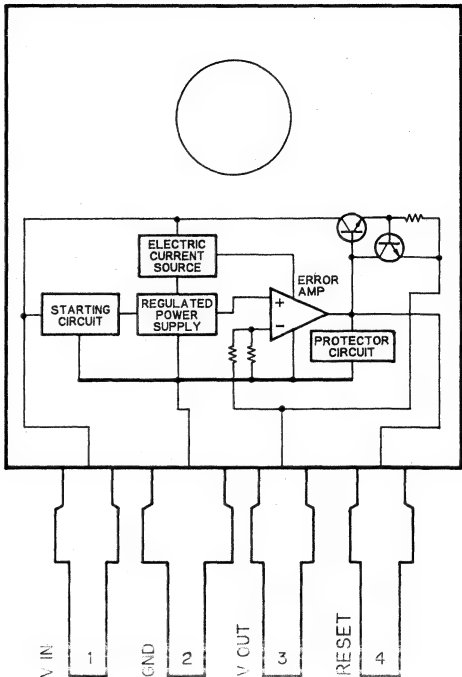


IC51: KHA141

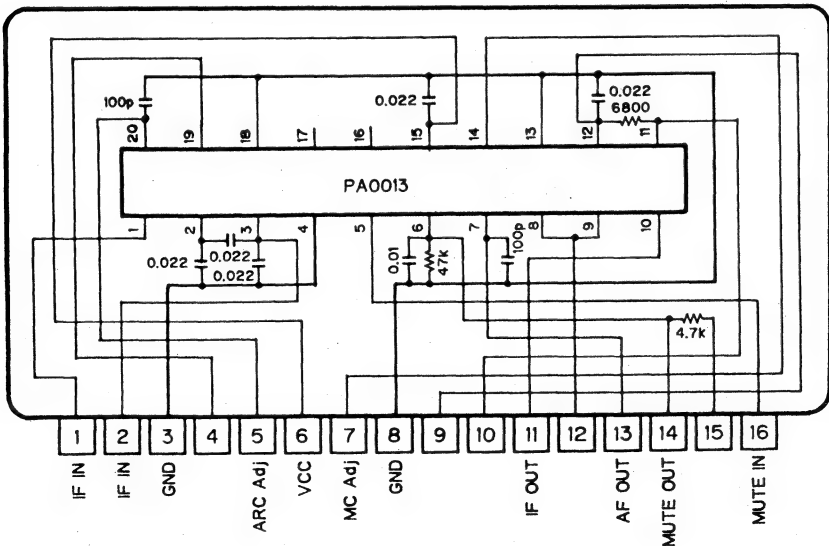


IC451: KHA243

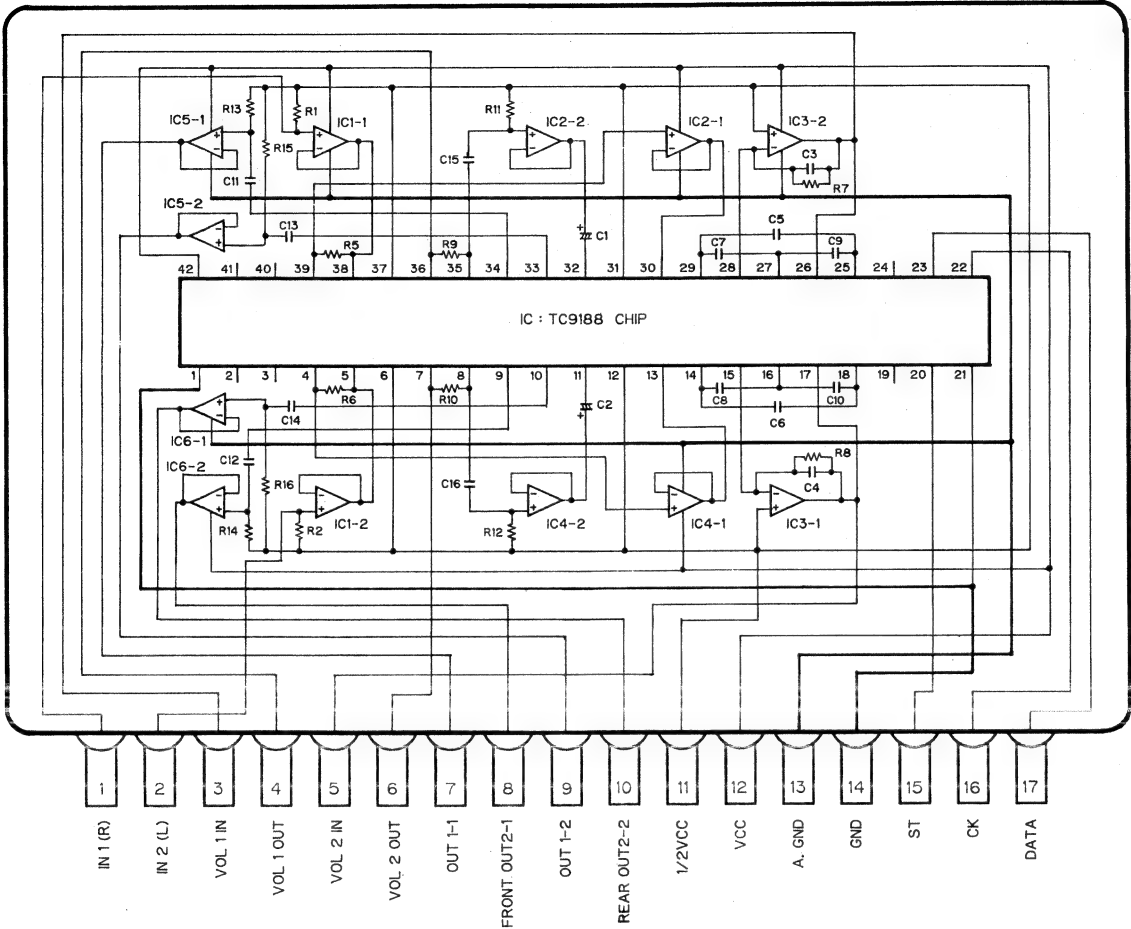


IC501: CX-7925B

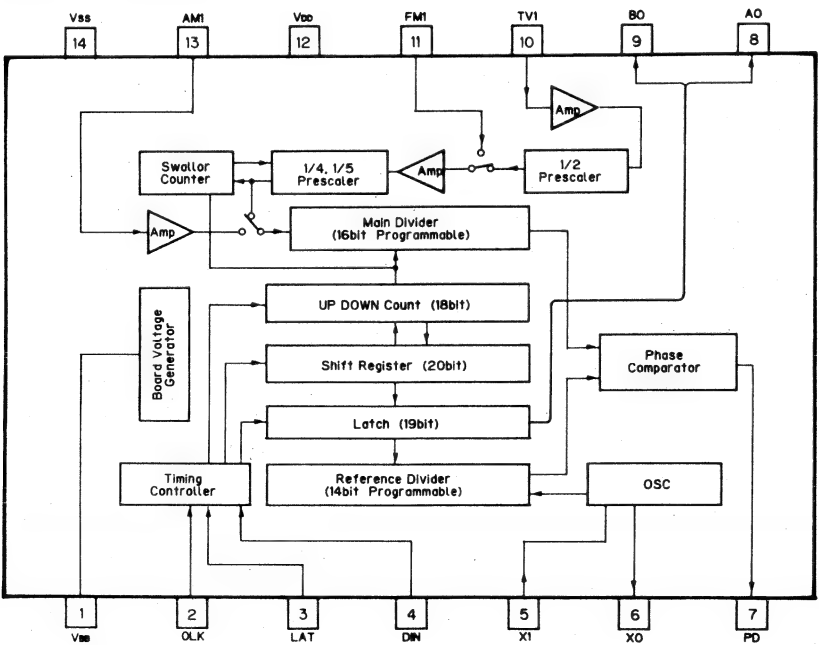


IC101: KHA115

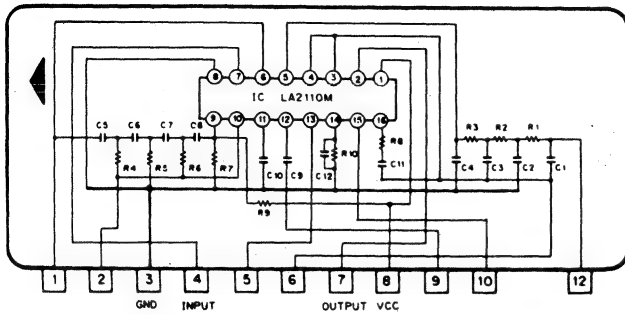


IC551, 552: TA7280P

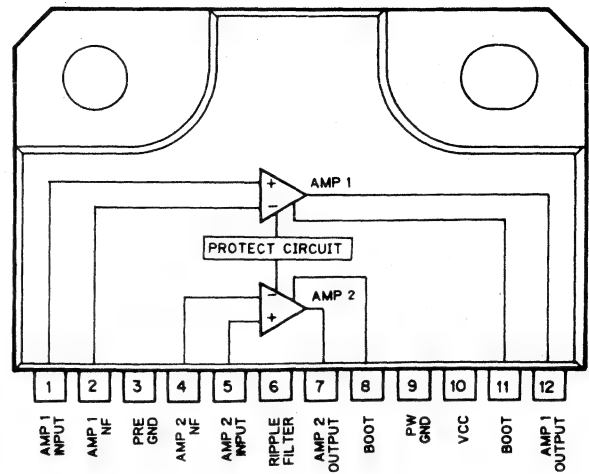

IC601: PA3022A

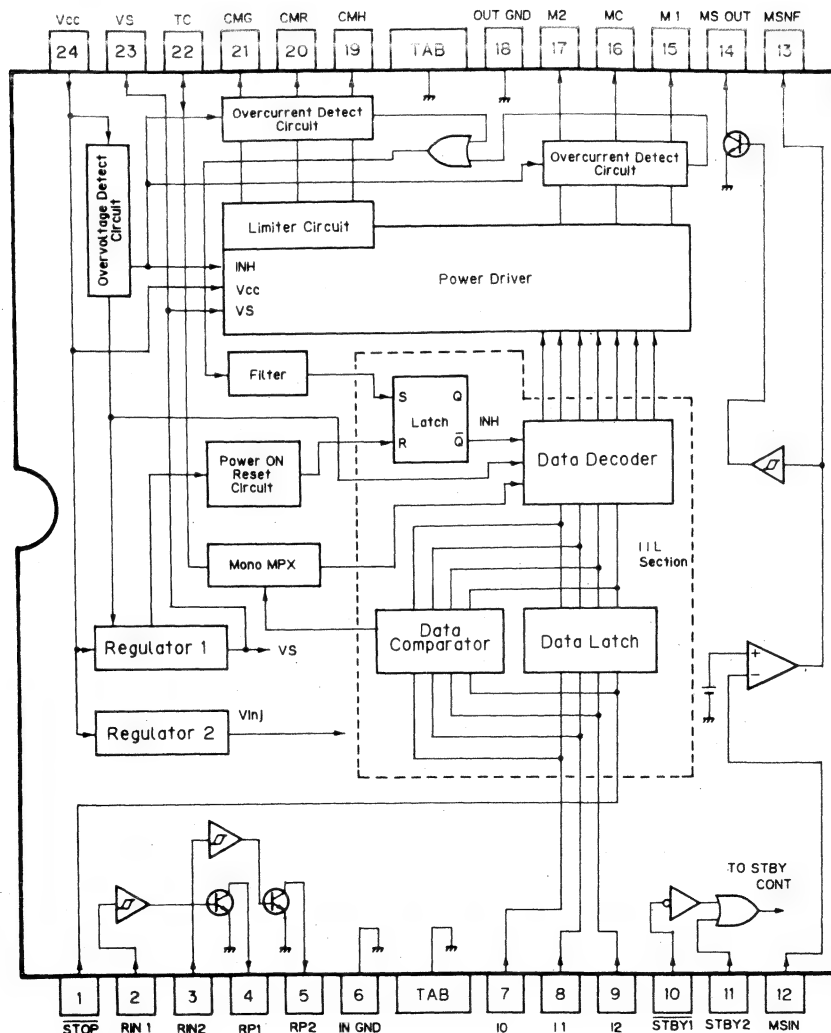

IC701: PD4157A

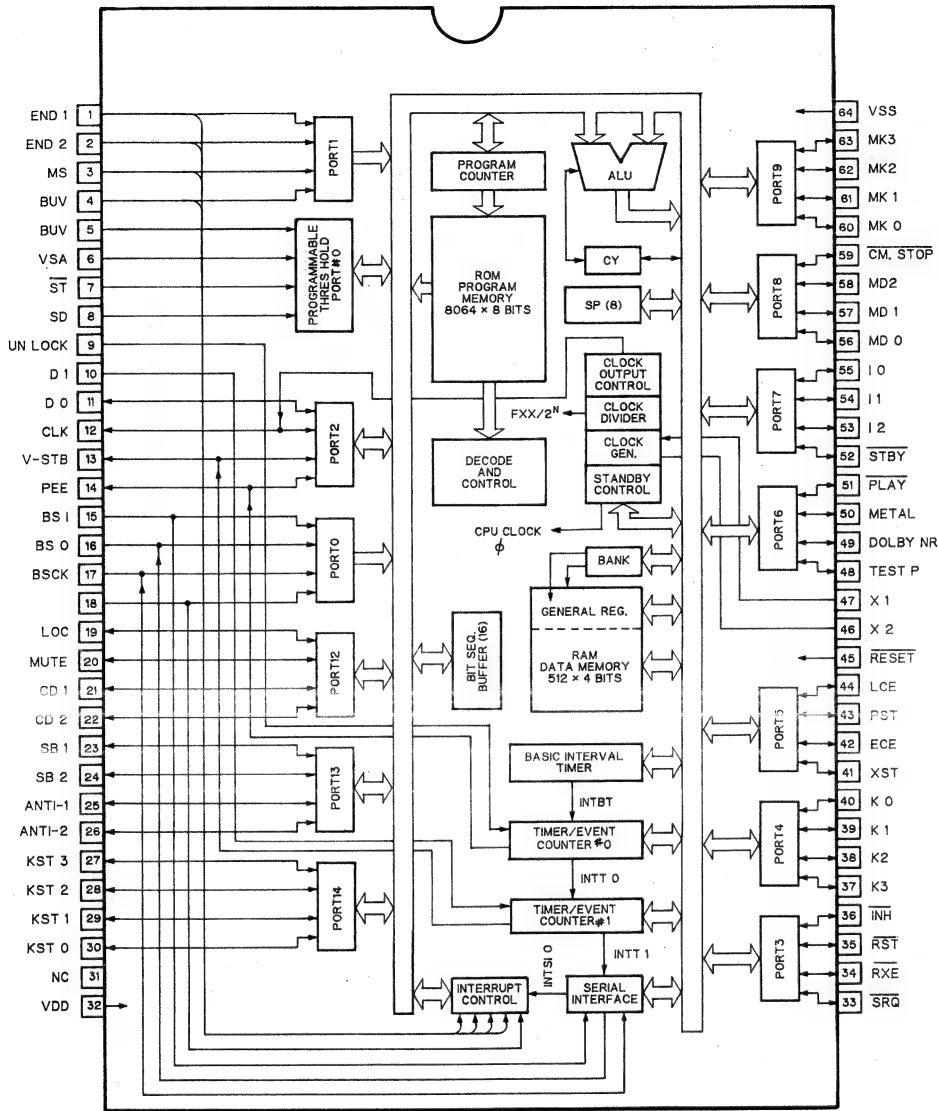


● Pin Function (PD4157A)

Pin No.	Pin Name	I/O	Function and Operation
1	END1	Input	Reel rotation detection terminal.
2	END2	Input	Detects IC601 (PA3022) pulse output.
3	MS	Input	Tape interim music detection terminal.
4	BUV	Input	Back up +B detector terminal. (0 – 1 – 5V)
5	BUV	Input	
6	VSA	Input	Power SW sense.
7	ST	Input	"L" during stereo.
8	SD	Input	Stop input terminal during seek and scan operation. Seek and scan stops during "H".
9	UN LOCK	Input	PLL lock detector.
10	D1	Input	Data input.




Pin No.	Pin Name	I/O	Function and Operation
11	D0	Output	Data output.
12	CLK	Output	Clock signal.
13	V-STB	Output	Strobe signal.
14	PEE	Output	4 kHz signal.
15	BS1	Input	Communication data line. (CD CHANGER)
16	BS0	Output	
17	BSCK	I/O	Communication clock line.
18			No connection.
19	LOC	Output	"H" during local search.
20	MUTE	Output	Mute output.
21	CD1	Output	"L" during CD play.
22	CD2	Output	
23	SB1	Output	Source selector control (IC751).
24	SB2	Output	
25	ANT1-1	Output	Causes LED (D919) to flash when Anti-Theft is operating.
26	ANT1-2	Output	Shifts to "L" when ACC is OFF and the key matrix switch is pressed.
27	KST3	Output	Key strobe output.
30	KST0	Output	
31	NC		No connection.
32	VDD		Power supply terminal.
33	SRQ	Output	Communication line. (CD CHANGER)
34	RXE	I/O	
35	RST	Output	
36	INH	Output	Turns LCD display on and off. "L" when LCD display.
37	K3	Input	Key return input.
40	K0	Input	
41	XST	Output	Strobe signal. (IC703, 704)
42	ECE	Output	Chip enable line. (IC702)
43	PST	Output	Strobe signal.
44	LCE	Output	Chip enable line. (IC901)
45	RESET	Input	Reset input terminal. Active "L".
46	X2		Crystal oscillator (194 MHz) connection terminal.
47	X1		
48	TEST P	Input	Test program.
49	DOLBY NR	Output	"H" during dolby NR ON.
50	METAL	Output	"H" during TAPE mode and metal tape detection.
51	PLAY	Output	"L" during PLAY operation.
52	STBY	Output	Input data to IC601 (PA3022). I <sub>2</sub> - I <sub>0</sub> are motor control logic output terminals.
53	I <sub>2</sub>	Output	
55	I <sub>0</sub>	Output	
56	MD0	Output	When the cassette mechanism status changes, a strobe is outputted for the status detection key matrix.
58	MD2	Output	
59	CM. STOP	Output	Capstan motor stops with "L".
60	MK0	Input	Cassette mechanism status detection key input terminal.
63	MK3	Input	
64	VSS		GND

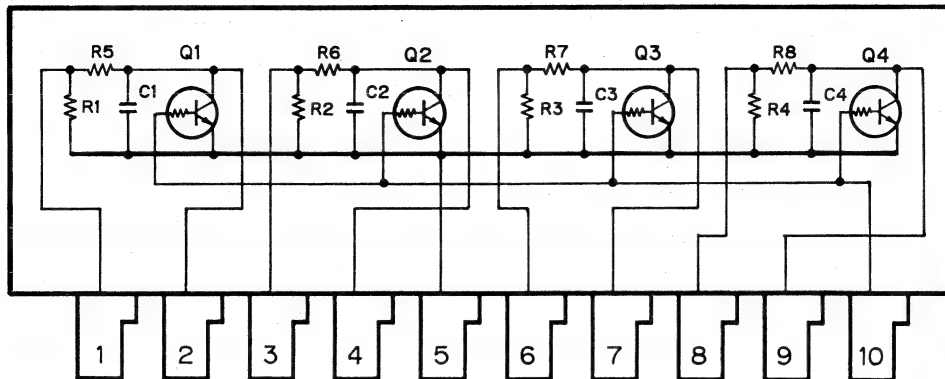
IC651: CWW1144




IC751: AN6540

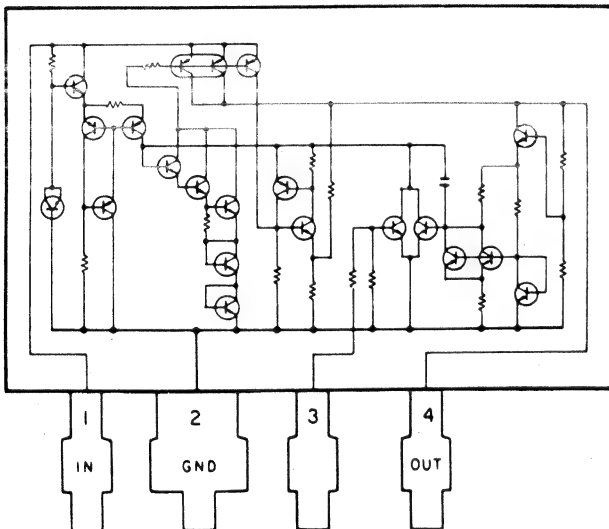

IC802: KHA804

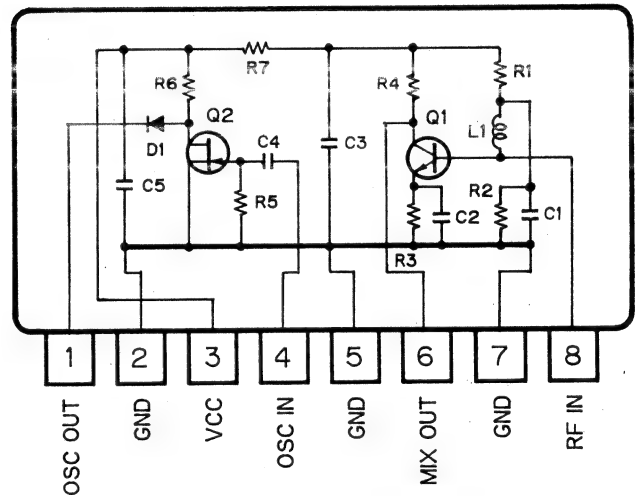


IC801: TK10483Z

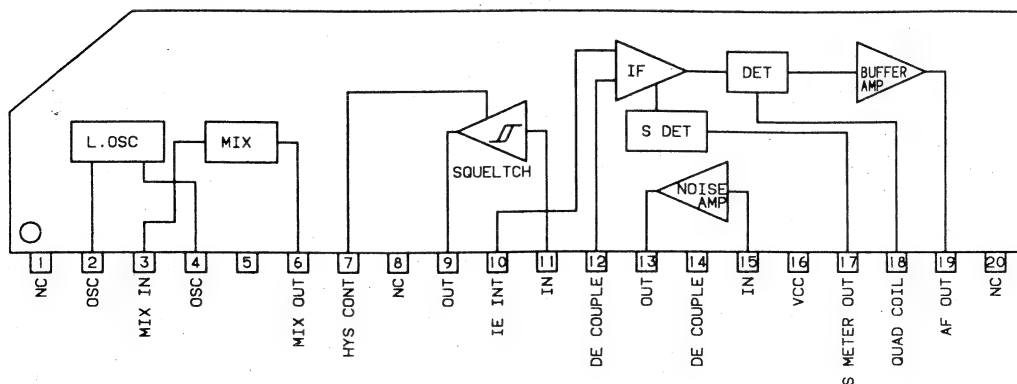



IC902: PA1005

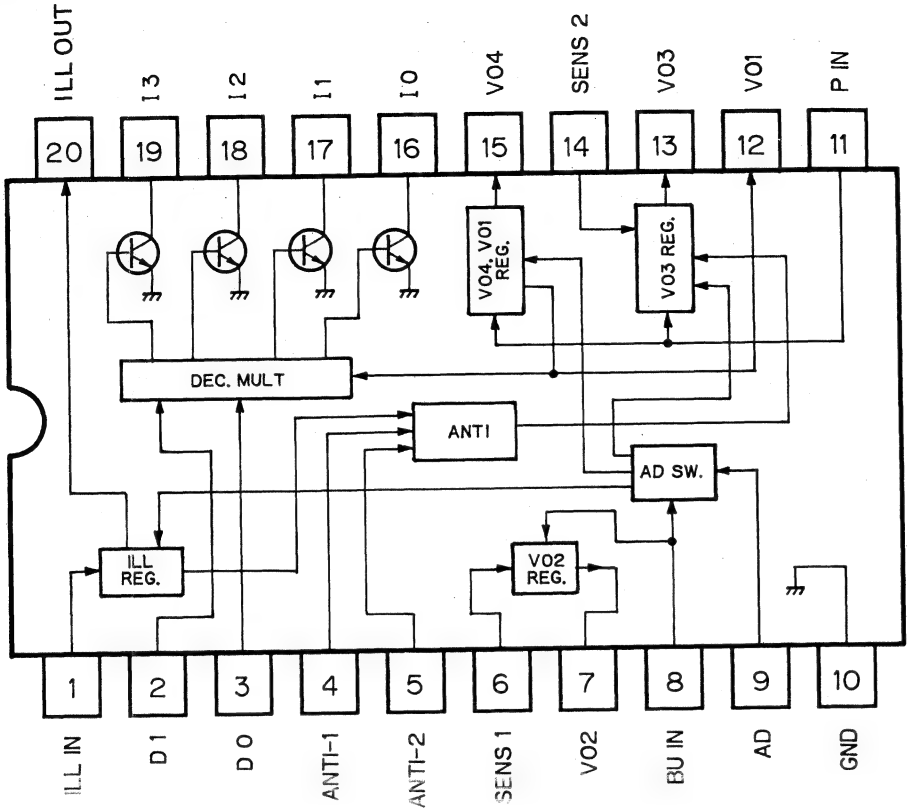


● Pin Function (PA1005)


Pin No.	Pin Name	Function and Operation
1	ILL IN	ILLUMI + B input.
2	D1	Data input ( $I_0 - I_3$ control).
3	D0	
4	ANTI-1	Signal input.
5	ANTI-2	Signal input (V02 control).
6	SENS1	No connection.
7	V02	9.6V output. (VOL, LAMP)
8	BU IN	UN SWD + B input.
9	AD	Standby input.
10	GND	GND
11	P IN	SWD + B input.
12	V01	5.7V output. (ch. IND)
13	V03	9.4V/8V output (DIMER/LCD LAMP)
14	SENS2	No connection.
15	V04	12.7V output. (MODE IND)
16	$I_0$	Switch output (BAND LED)
17	$I_1$	Switch output. (UP, DOWN LED)
18	$I_2$	Switch output. (FF, REW LED)
19	$I_3$	Switch output. (EJ, SB, DOLBYNR LED)
20	ILL OUT	10.5V output. (Door LED)

● LCD Unit

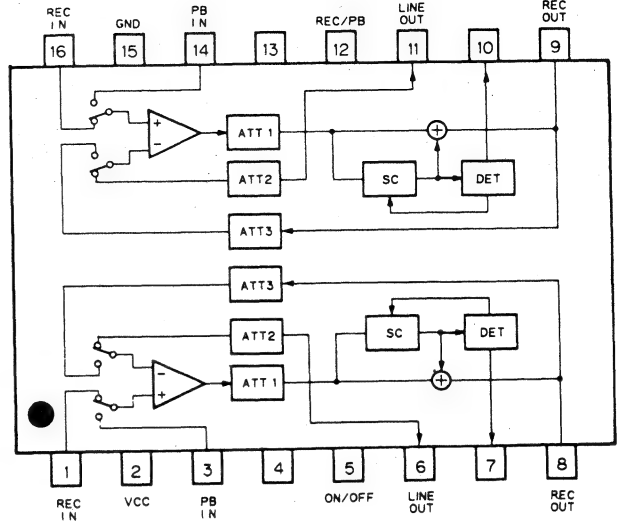
IC301: CXA1102P



IC901: LC7582P

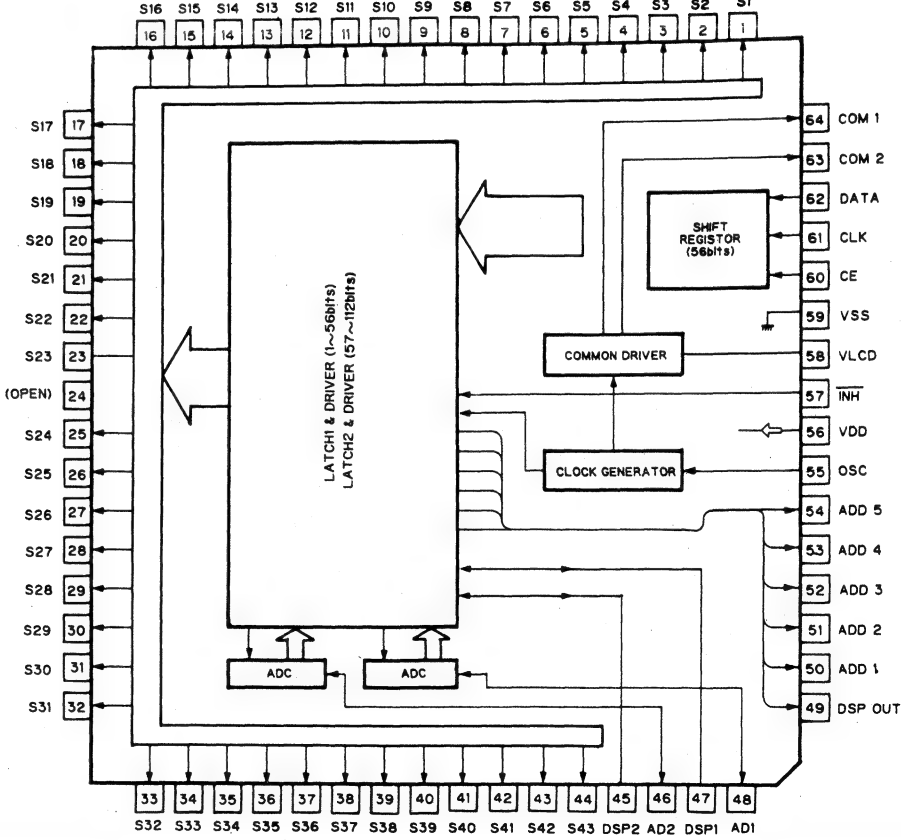

## 9. SCHEMATIC CIRCUIT DIAGRAM

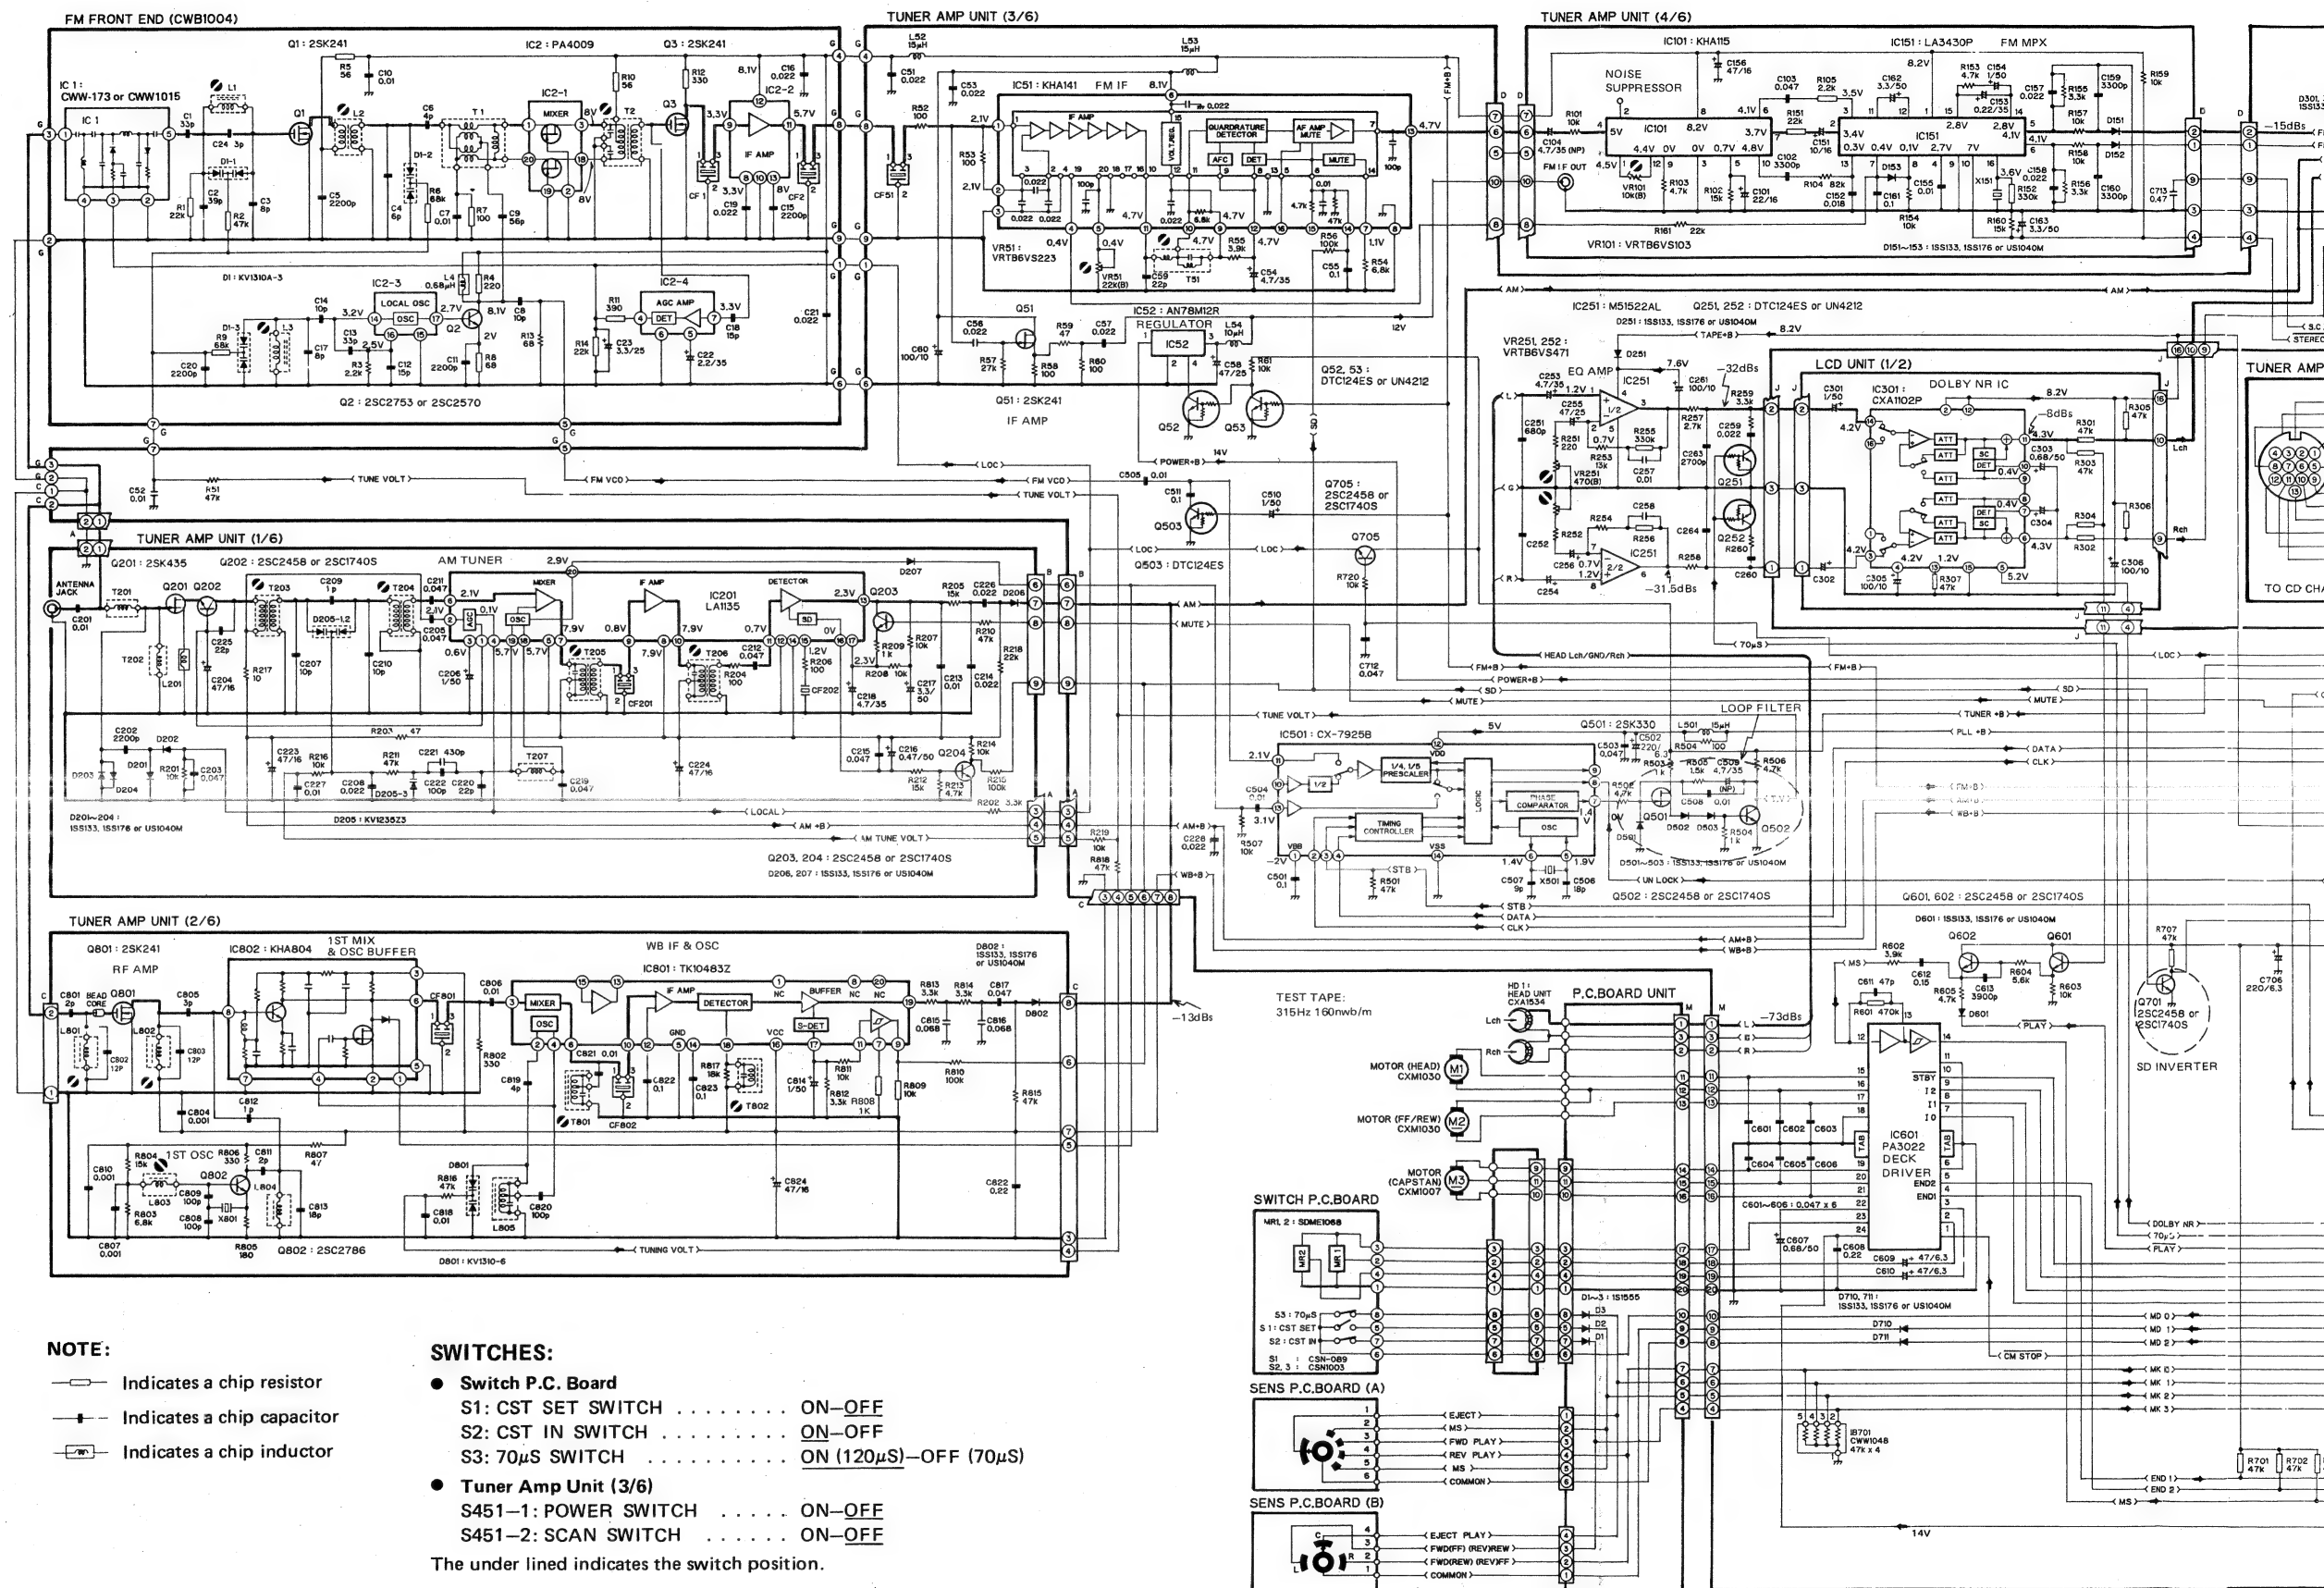



 


Fig. 11



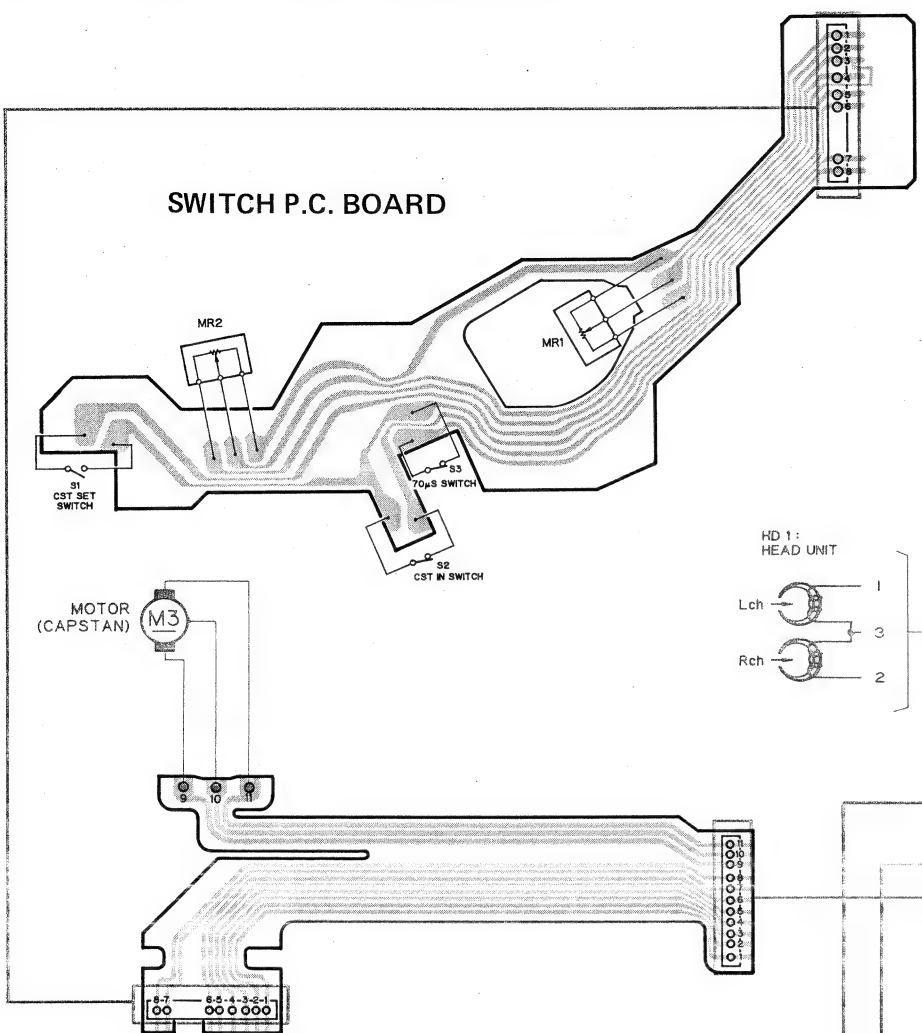
10. CONNECTION DIAGRAM

A


B

C


D




SENS P.C. BOARD (A)

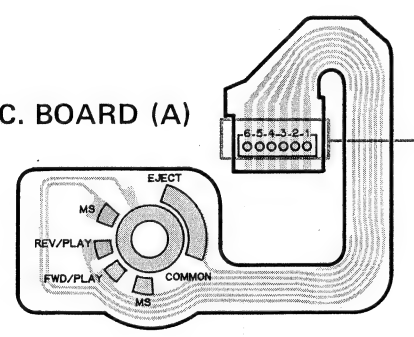


SENS P.C. BOARD (B)

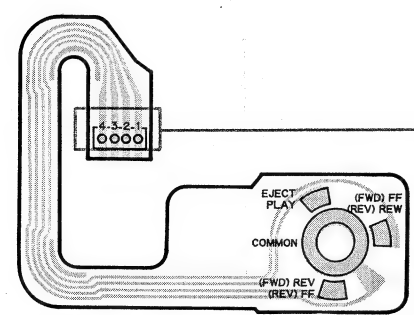


KEY BOARD UNIT

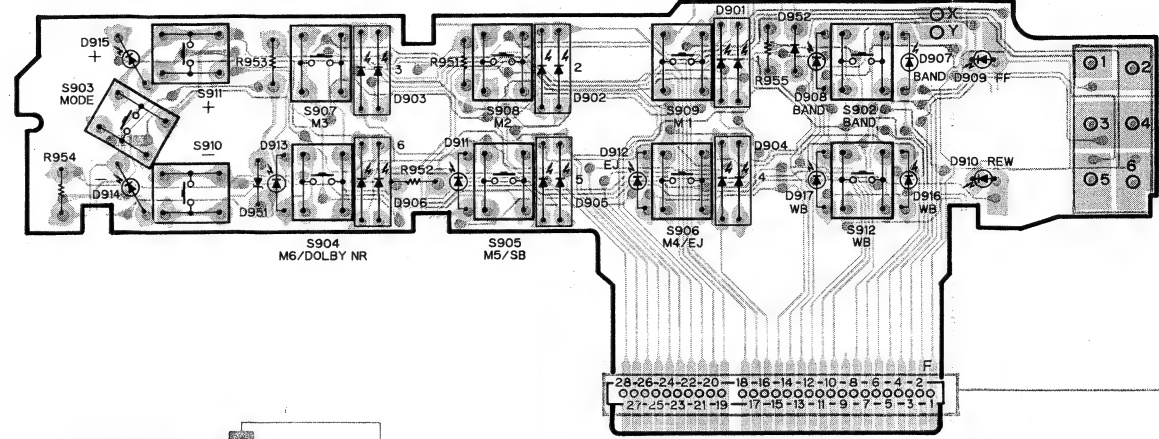

P.C. BOARD UNIT

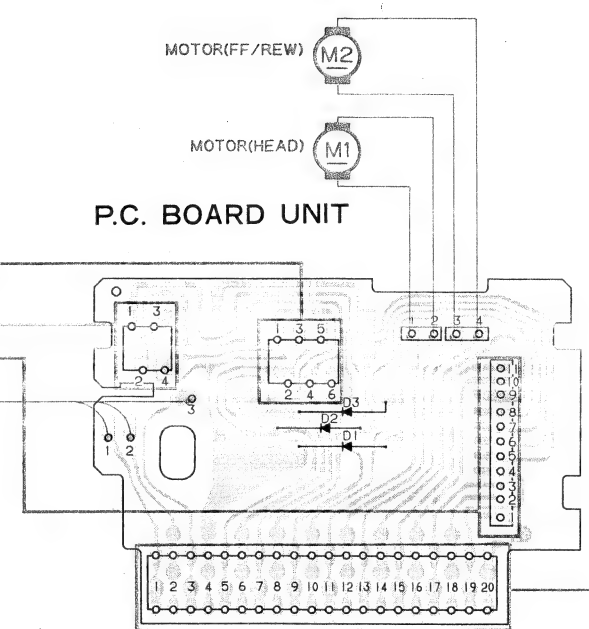

FM FRONT END (CWB1004)

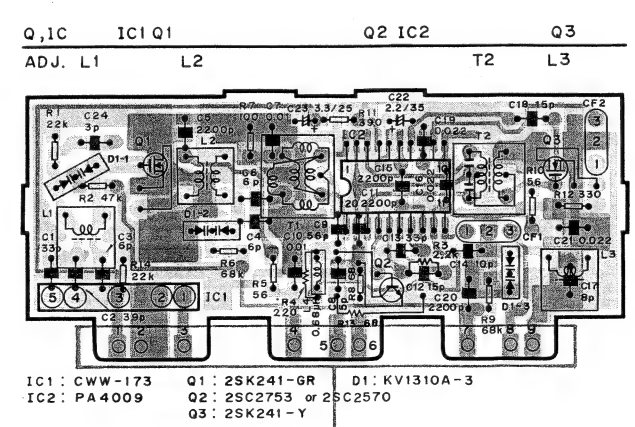


TUNER AMP UNIT (1/6): IC201

1	2	3	4	5	6	7	8	9	10
	2.1V	0.6V	5.2V	0V	2.1V	7.9V	7.9V	0.8V	7.9V
11	12	13	14	15	16	17	18	19	20
0.7V	0V	2.3V	1.9V	1.2V	0V	2.3V	5.7V	5.7V	2.9V



FM FRONT END: IC2

1	2	3	4	5	6	7	8	9	10
	0V	8V			0V	3.3V	3.3V	3.3V	0V
11	12	13	14	15	16	17	18	19	20
5.7V	8.1V	8V	3.2V	0V	2.5V	2.7V	8V	0V	

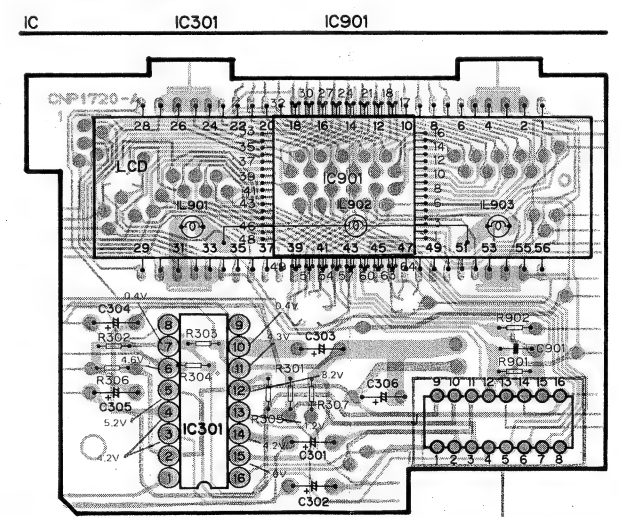LCD UNIT



TUNER AMP UNIT (2/6)

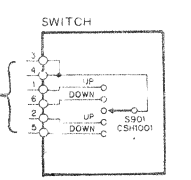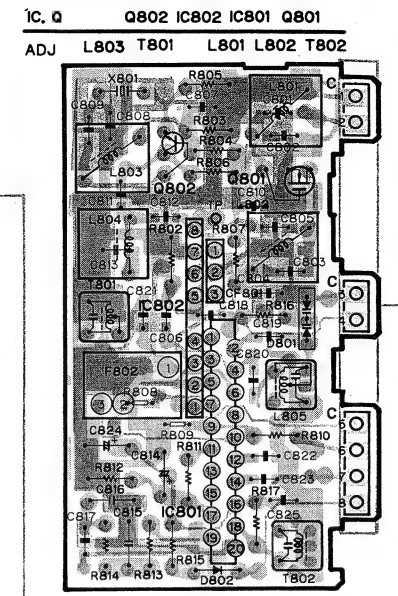


TUNE

1
2.1V
9
4.7V


UNIT (2/6)

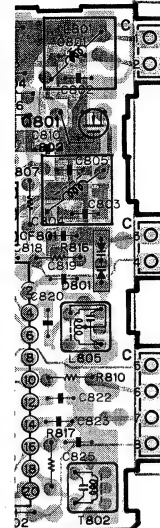IC801 Q801  
301 L802 T802




TUNER AMP UNIT (1/6)

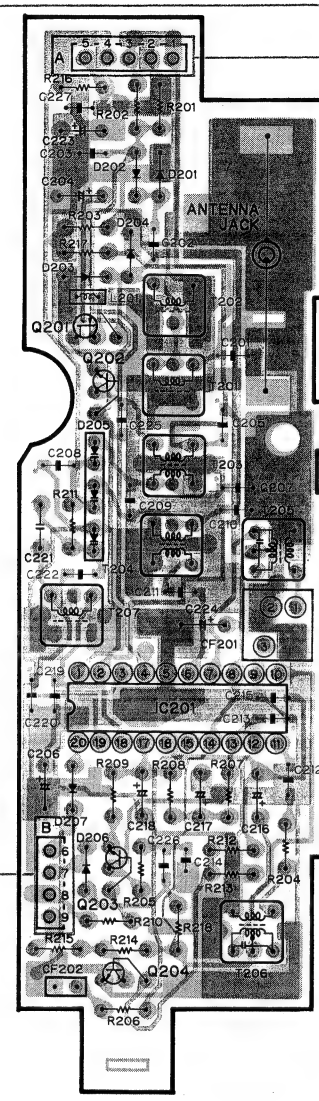Q202 Q203  
IC, Q Q201 Q204 IC201  
ADJ T203 T204 T206  
T205



TUNER AMP  
UNIT (5/6)

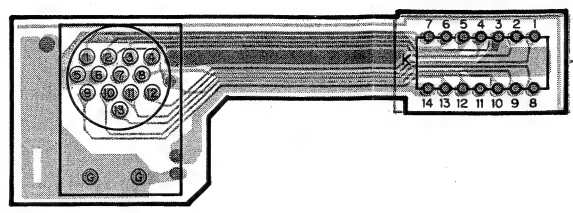


TUNER AMP UNIT (3/6): IC752


1	2	3	4	5	6	7	8	9	10
0V	5.1V			0V	8.9V	13.3V	14V	14V	8.5V
11	12	13	14	15	16	17	18	19	20
7.4V	8.2V	8.2V	8.2V	5.1V	4.0V	5.1V	5.1V	5.7V	5.1V

TUNER AMP UNIT (4/6)

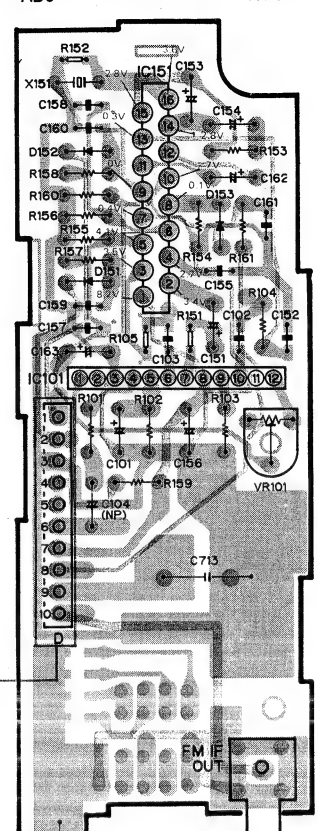
IC, Q IC151 IC101  
ADJ VR101




IB701, IB702, IB703, IB706

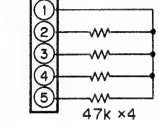


IB704

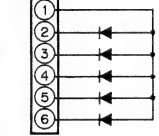

IB705

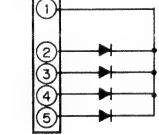

TUNER AMP UNIT (6/6)

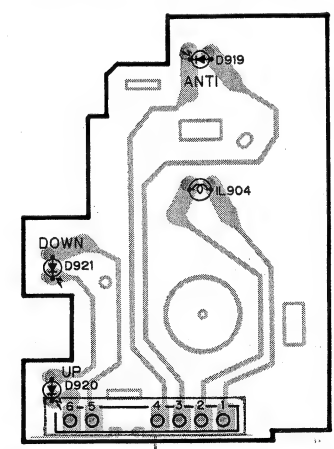

TUNER AMP UNIT (4/6): IC101

1	2	3	4	5
4.5V		0V	5V	0.7V
6	7	8	9	10
4.1V	3.7V	8.2V	0V	4.8V

TUNER AMP UNIT (3/6): IC51

1	2	3	4	5	6	7	8
2.1V	2.1V	0V	0.4V	0.4V	8.1V	1.1V	0V
9	10	11	12	13	14	15	16
4.7V	4.7V	4.7V	4.7V	4.7V			

TUNER AMP UNIT (3/6)

Fig. 12



## 11. CASSETTE MECHANISM EXPLODED VIEW

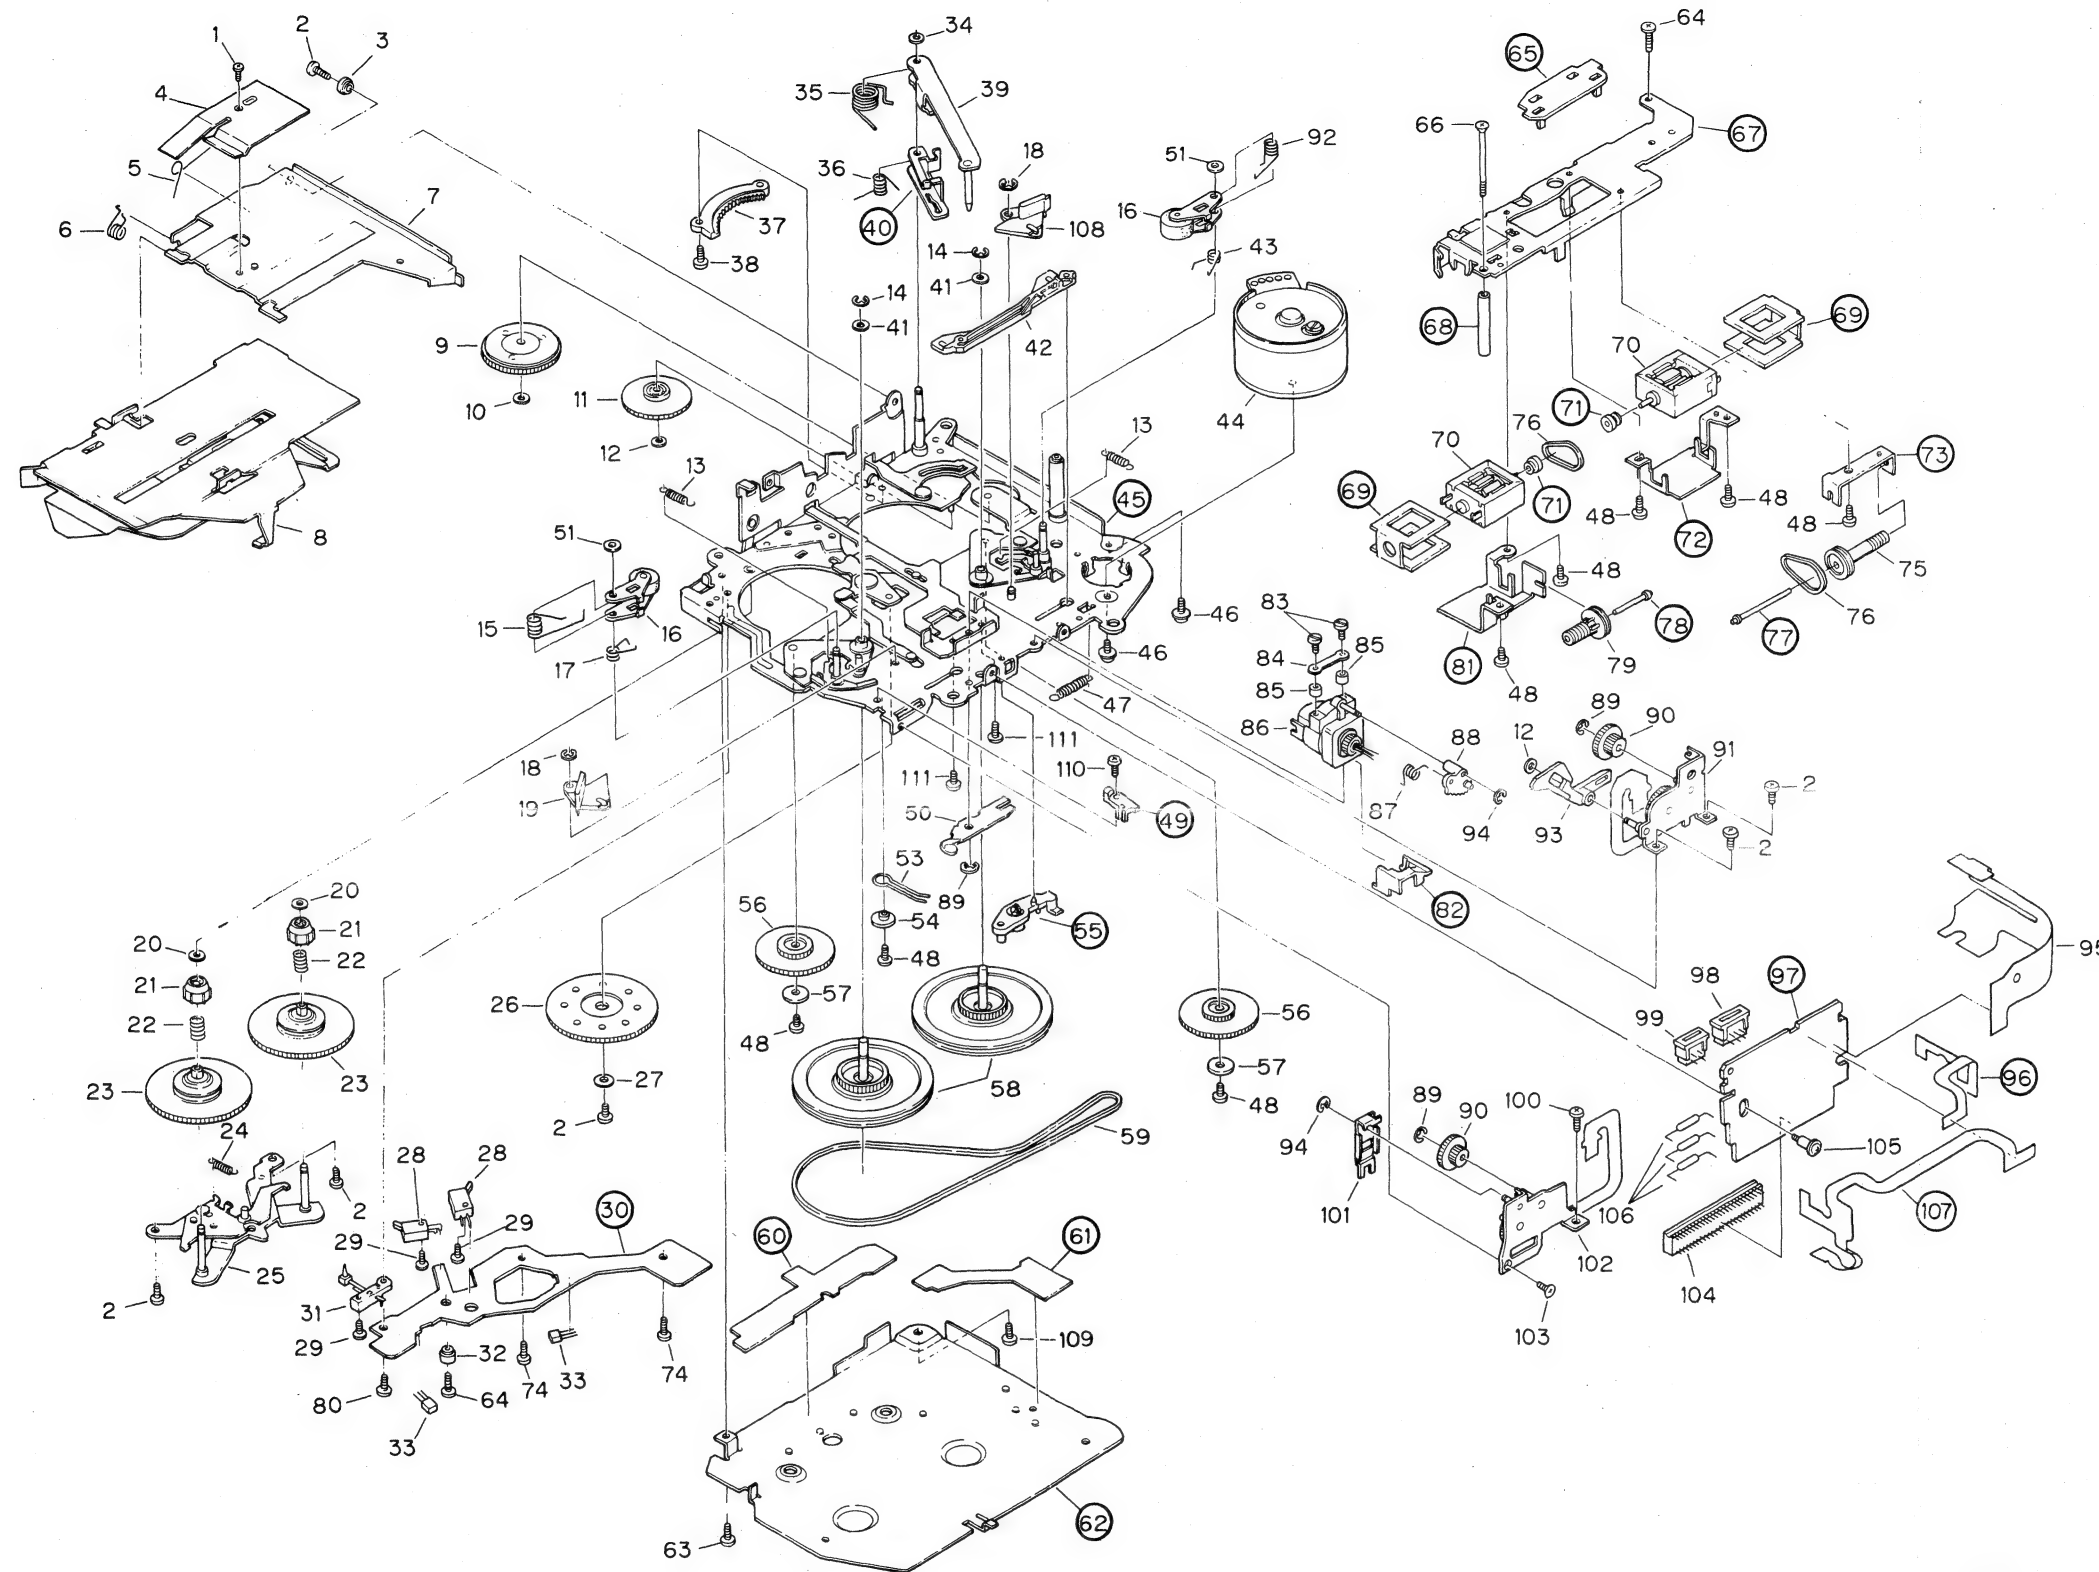


Fig. 13

- **Parts Li**

**NOTE:**

- For your  
marks ★  
★★: GEA  
This clas  
model nu  
Parts whi  
Parts ma  
longer th

Mark      No

★ ★

★★

★★

★ ★

★

● Parts List

NOTE:

- For your parts Stock Control, the fast moving items are indicated with the marks ★★ and ★.
- ★★: GENERALLY MOVES FASTER THAN ★.
- This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts whose parts numbers are omitted are subject to being not supplied.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

A

B

C

D

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1	HBA-147	Screw M1.4×1.4		35	CBH-887	Spring
	2	BMZ20P040FMC	Screw		36	CBH-886	Spring
	3	CLB-663	Bush		37	CNV1075	Gear
	4	CBL1043	Spring		38	CBA1004	Screw M2×6
	5	CBH-867	Spring		39	CXD-389	Arm Unit
	6	CBH-837	Spring		40		Arm
	7	CNC1597	Arm		41	HBH-179	Washer
	8	CXA2164	Holder Unit		42	CNV1257	Lever
	9	CXA2088	Gear Unit		43	CBH-833	Spring
	10	CBF1024	Washer	★★	44	CXM1007	Motor (Capstan)
	11	CNY-271	Gear		45		Chassis Unit
	12	CBF-126	Washer		46	PMS26P025FMC	Screw
	13	CBH-835	Spring		47	CBH-830	Spring
	14	CBG1003	E Type Washer		48	HBA-175	Screw M2×2.5
	15	CBH-832	Spring		49		Spacer
★★	16	CXA1445	Pinch Roller Unit		50	CBL1050	Spring
	17	CBH-834	Spring		51	CBF1025	Washer
	18	YE25FUC	E Type Washer		52	.....	
	19	CNV1254	Arm		53	CBH-893	Spring
	20	CBF1022	Washer		54	CLA1110	Collar
	21	CNW-932	Collar		55		Clamper
★★	22	CBH-827	Spring		56	CNV1616	Gear
	23	CXA2089	Reel Unit		57	CLA1238	Collar
	24	CBH-868	Spring		58	CNV1572	Flywheel
	25	CXA1481	Bracket Unit	★★	59	CNT-111	Belt
	26	CNW-944	Gear		60		Insulator
★★	27	CLA1109	Collar		61		Insulator
	28	CSN1003	Switch (70μS, CST IN)		62		Cover
	29	CBA1025	Screw M1.7×5.5		63	BMZ20P030FMC	Screw
	30		P.C. Board		64	CBA-172	Screw M1.7×5.5
★★	31	CSN-089	Switch (CST SET)		65		Holder
	32	CLA1170	Collar		66	CBA-165	Screw M2×25
★	33	SDME106B	Magnetic Resistive Device		67		Guide
	34	CBF-046	Washer		68		Spacer
					69		Insulator

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
★★	70	CXM1030	Motor (FF/REW, Head Position)		93	CNV1495	Arm
	71		Pulley		94	YE15FUC	E Type Washer
	72		Bracket		95	CNP1227	P.C. Board
	73		Bracket		96		P.C. Board
					97		P.C. Board
	74	CBA1037	Screw M2×2.5		98	CKS1075	Connector (6P)
	75	CNV1255	Pulley		99	CKS1073	Connector (4P)
★★	76	CNT1010	Belt		100	BMZ20P060FMC	Screw
	77		Shaft		101	CNH-004	Arm
	78		Shaft		102	CXA1548	Holder Assy
	79	CNV1256	Pulley		103	HBA-209	Screw M2×2
	80	CBA1054	Screw M2×5		104	CKS-678	Connector (20P)
	81		Bracket		105	CBA1022	Screw M2×2×3
	82		Cover	★	106	1S1555	Diode
	83	CBA1055	Screw M1.4×8		107		P.C. Board
	84	CBE-114	Spring		108	CNV1253	Arm
★★	85	CNY-134	Azimuth Rubber		109	CBA1060	Screw M2×7
	86	CXA1534	Head Unit		110	CBA1015	Screw M2×4
	87	CBH-829	Spring		111	CBA1041	Screw M2×2.5
	88	CNW-939	Gear				
	89	YE12FUC	E Type Washer				
	90	CNV1262	Gear				
	91	CXA1546	Holder Assy				
	92	CBH-831	Spring				

# 12. CHASSIS EXPLODED VIEW

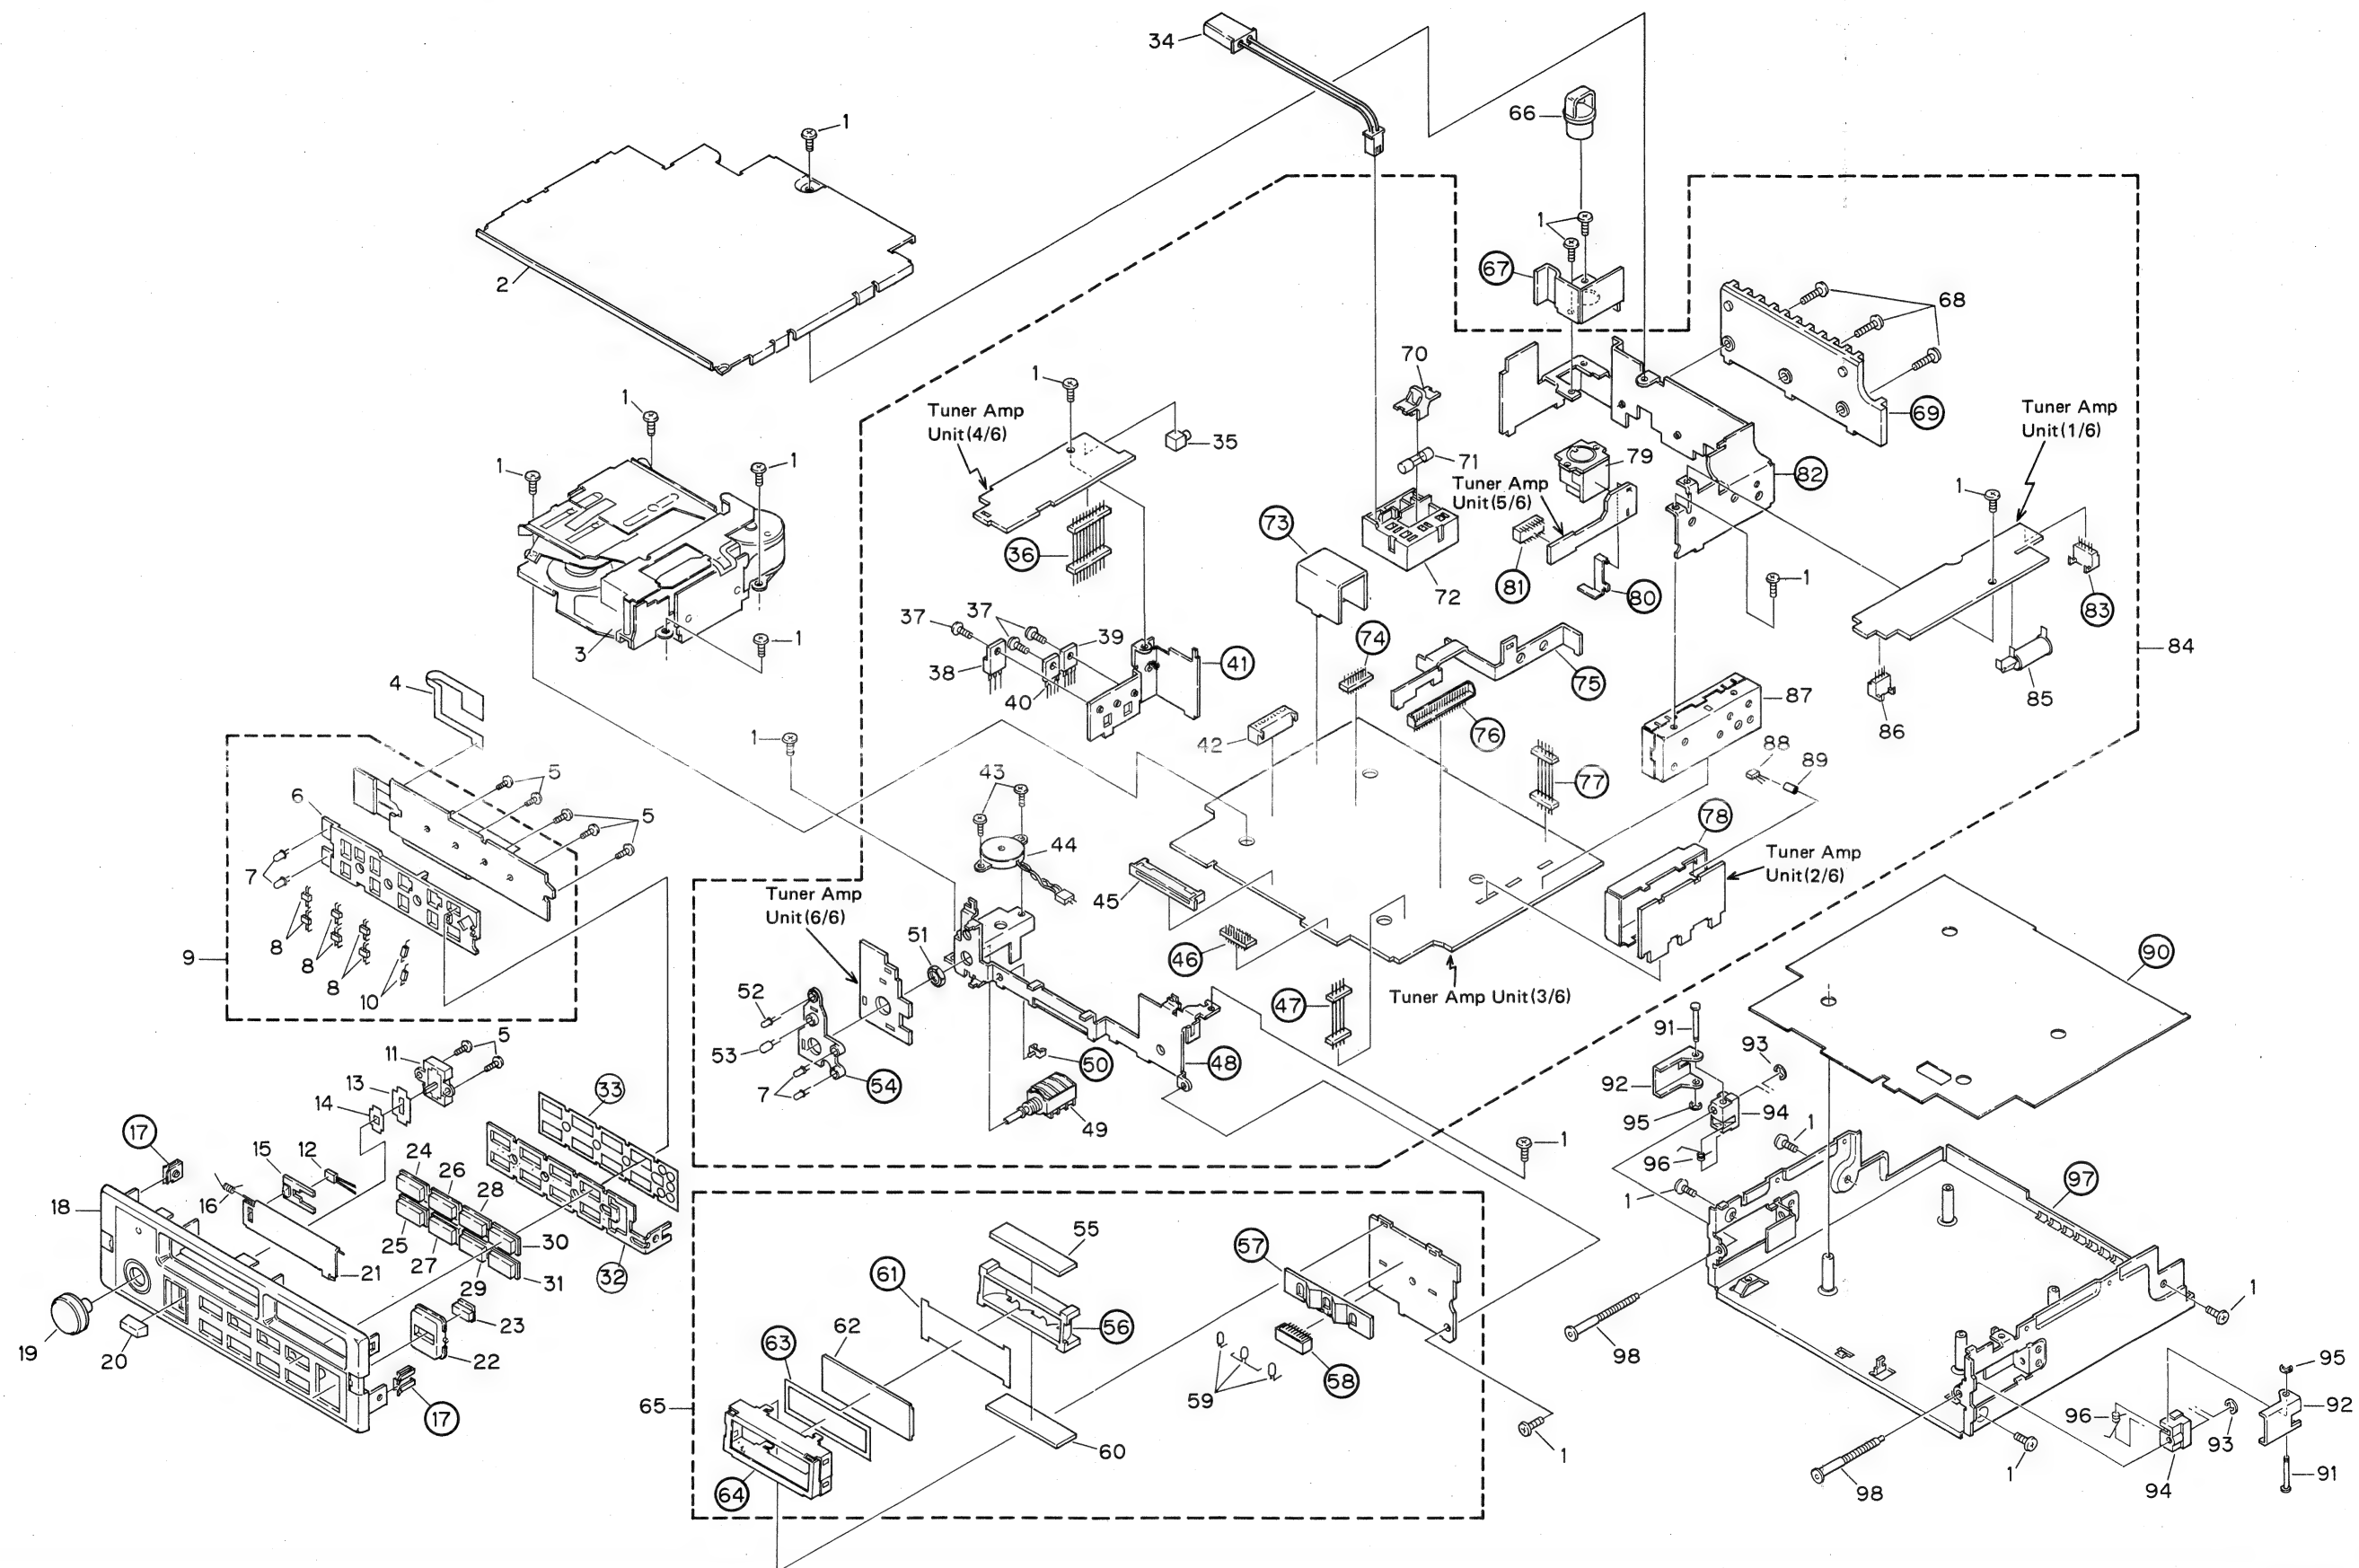


Fig. 14

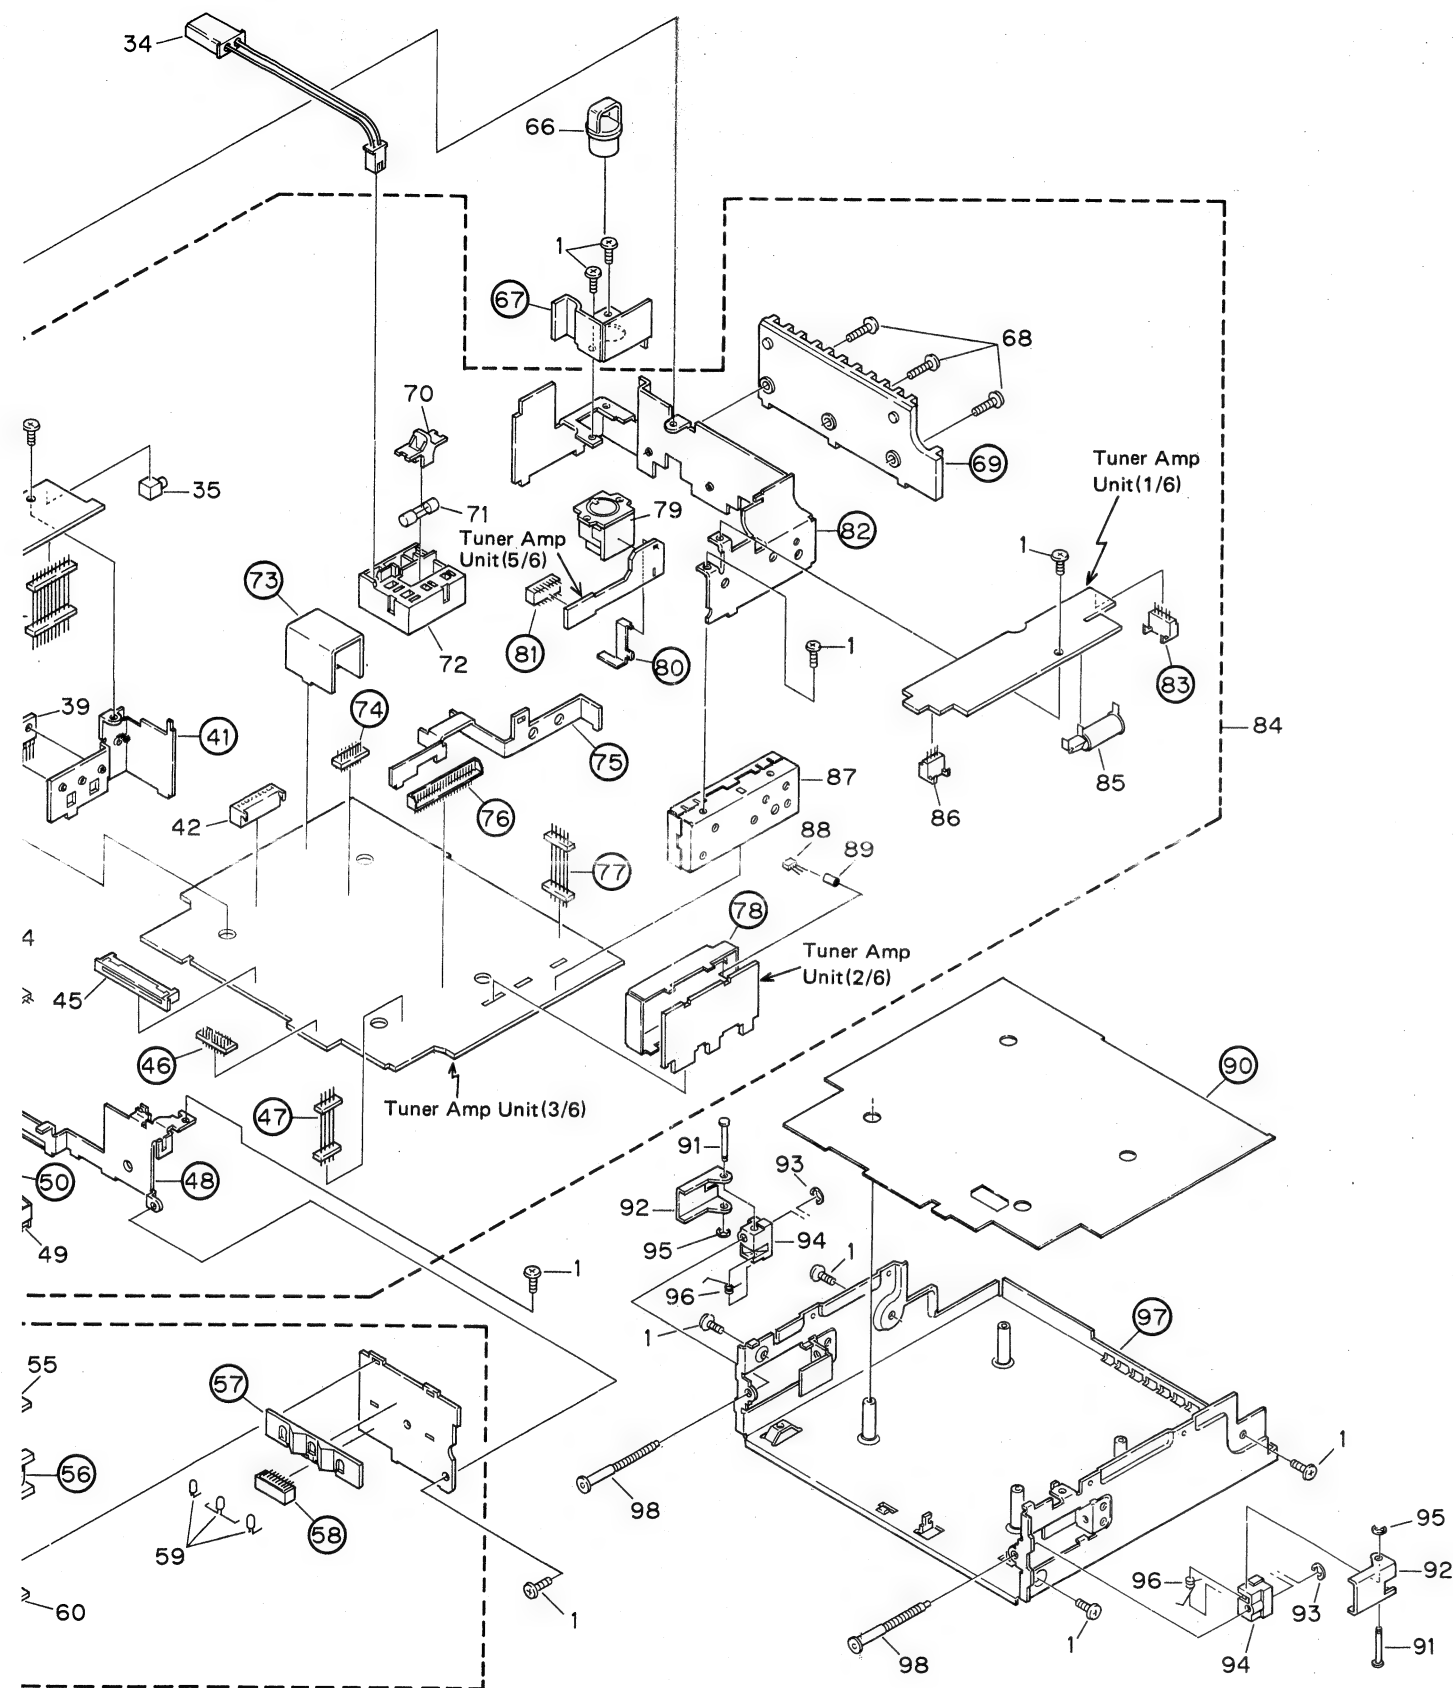


Fig. 14

● Parts List

Mark	No.	Part No.	Description
●	1.	BMZ26P050FMC	Screw
	2.	CXA2136	Case Unit
	3.	CXK1652	Cassette Mechanism Assy
	4.	CNP1278	P.C. Board
	5.	CBA1100	Screw
	6.	CNV1623	Housing
*	7.	AA3432S	LED
*	8.	LN12GC56	LED
●	9.	CWM1507	Key Board Unit
*	10.	LN81RC5V	LED
**	11.	CSH1001	Switch (S901)
*	12.	AA4524K	LED (Door)
	13.	CNM1345	Cover
	14.	CNM1918	Cover
	15.	CNS1181	Lens
	16.	CBH1081	Spring
	17.		Holder
	18.	CXA2137	Grille Unit
	19.	CAA1014	Knob
	20.	CAC1678	Knob
	21.	CAT1012	Door
*	22.	CAC1658	Button
*	23.	CAC1659	Button (MODE)
*	24.	CAC1650	Button (BAND)
*	25.	CAC1657	Button (WB)
*	26.	CAC1651	Button (1)
*	27.	CAC1654	Button (4/EJ)
*	28.	CAC1652	Button (2)
*	29.	CAC1655	Button (5/SB)
*	30.	CAC1653	Button (3)
*	31.	CAC1656	Button (6/DOLBY NR)
	32.		Spacer
	33.		Insulator
	34.	CDE1823	Connector (2P)
	35.	CKX1007	Connector
	36.		Plug
	37.	BMZ30P060FMC	Screw
**	38.	2SD1276	Transistor (Q905)
**	39.	AN78M12R	IC (IC5)
**	40.	AN6540	IC (IC751)
	41.		Frame
	42.	HKS-180	Connector
	43.	CBA1015	Screw
	44.	CPV1004	Buzzer
	45.	CKS1130	Connector
	46.		Plug
	47.		Plug
	48.		Frame
**	49.	CCS1115	Volume (VR451/S451)
	50.		Clamper

Mark	No.	Part No.	Description
	51.	CBN-003	Nut
*	52.	EBR3432S	LED (D919)
**	53.	CEL1066	Lamp 8V, 60mA
	54.		Holder
	55.	CNV1680	Connector
	56.		Holder
	57.		Holder
	58.		Connector (16P)
	59.	CEL1019	Lamp 8V, 60mA
	60.	CNV1681	Connector
	61.		Sheet
	62.	CWW1157	LCD
	63.		Spacer
	64.		Case
●	65.	CWM1506	LCD Unit
	66.	CNV1468	Cap
	67.		Cover
	68.	BMZ30P080FMC	Screw
	69.		Heat Sink
	70.	CNV1211	Fuse Holder
**	71.	CEK1007	Fuse, 6.3A
	72.	CKS1518	Connector
	73.		Case
	74.		Plug
	75.		Bracket
	76.		Plug
	77.		Plug
	78.		Case
	79.	CKS1144	Connector
	80.		Contact Peace
	81.		Connector
	82.		Frame
	83.		Connector
●	84.	CWM1505	Tuner Amp Unit
	85.	CKX1006	Antenna Plug
	86.	HKS-174	Connector
	87.	CWB1004	FM Front End
**	88.	2SK241	Transistor (Q801)
	89.	CTX-022	Bead Core
	90.		Insulator
	91.	CLA1071	Shaft
	92.	CNC1103	Clamper
	93.	YE20FUC	E Type Washer
	94.	CNR1016	Slider
	95.	YE15FUC	E Type Washer
	96.	CBH1019	Spring
	97.		CHassis
	98.	CLA1279	Bolt



13. ELECTRICAL PARTS LIST

NOTE:  
• For your parts Stock Control, the fast moving items are indicated with the marks \*\* and \*.  
\*\* : GENERALLY MOVES FASTER THAN \*.  
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.  
• Parts whose parts numbers are omitted are subject to being not supplied.  
• The part numbers shown below indicate chip components.  
Chip Resistor  
RS1/8S□□□J, RS1/10S□□□J  
Chip Capacitor (except for CQS.....)  
CKS....., CCS....., CSZS.....

Unit Number : CWB1004  
Unit Name : FM Front End

MISCELLANEOUS

Mark	====	Circuit Symbol & No.	====	Part Name	Part No.
** IC	1			CWW1015 (CWW-173)	
** IC	2			PA4009	
** Q	1			2SK241	
** Q	2			2SC2753	
				(2SC2570)	
** Q	3			2SK241	
* D	1			KV1310A-3	
L	1	Coil		CTC1001	
L	2	Coil		CTC1002	
L	3	Coil		CTC1003	
L	4	Inductor		CTF-185	
T	1	Coil		CTC1005	
T	2	Coil		CTC1004	
CF	1 2	Ceramic Filter		CTF-182	

RESISTORS

Mark	====	Circuit Symbol & No.	====	Part Name	Part No.
R	1 14			RS1/8S223J	
R	2			RS1/8S473J	
R	3			RD1/4PS222JL	
R	4			RD1/4PS221JL	
R	5 10			RS1/8S560J	
R	6 9			RS1/8S683J	
R	7			RS1/8S101J	
R	8			RS1/8S680J	
R	11			RS1/8S391J	
R	12			RS1/8S331J	
R	13			RD1/4PS680JL (RD1/6PS680J)	

CAPACITORS

Mark	====	Circuit Symbol & No.	====	Part Name	Part No.
C	1			CCSSH330J50	
C	2			CCSSH390J50	
C	3			CCSCH060D50 (CCSCH060C50)	
C	4			CCSTH060C50	

Mark	====	Circuit Symbol & No.	====	Part Name	Part No.
				(CCSTH060D50)	
				CKSYB222K50	
				CCSCH040C50	
				CKSYB103K50	
				CCSCH100D50	
				CCSSH560J50	
				CCSTH150J50	
				CCSTH330J50	
				CCSTH100D50	
				CKSYB223K50	
				CCSUJ080D50	
				CFA2R2M351S	
				CFA3R3M251S	
				CCSSH030C50	

Unit Number : CWM1505  
Unit Name : Tuner Amp Unit

MISCELLANEOUS

Mark	====	Circuit Symbol & No.	====	Part Name	Part No.
** IC	51			KHA141	
** IC	52			AN78M12R	
** IC	101			KHA115	
** IC	151			LA3430P	
** IC	201			LA1135	
** IC	251			M51522AL	
** IC	451			KHA243	
** IC	501			CX-7925B	
** IC	551 552			TAT7280P	
** IC	601			PA3022	
** IC	651			CWW1144	
** IC	701			PD4157A	
** IC	702			PDH001	
** IC	703 704			MB88307P	
** IC	751			AN6540	
** IC	752			PA1004	
** IC	801			TK10483Z	
** IC	802			KHA804	
** IC	902			PA1005	
** IC	903			CWW1158	
** Q	51			2SK241	
** Q	52 53 251 252 503 551 552 702 753			DTA124ES (UN4212)	

Mark	====	Circuit Symbol & No.	====	Part Name	Part No.
** Q	201			2SK435	
** Q	202 203 204 451 452 502 601 602 651 701			2SC2458	
				(2SC1740S)	
** Q	501			2SK330	
** Q	703			DTA144ES (UN4113)	
** Q	704 752			2SB808	
** Q	705 706			2SC2458 (2SC1740S)	
** Q	751 901 903 904			2SC3665	
** Q	801			2SK241	
** Q	802			2SC2786	
** Q	902 906			2SD1930	
** Q	905 (Darlington Tr)			2SD1276	
* D	151 152 153 201 202 203 204 206 207 251			1SS133 (1SS176) (US1040M)	
* D	205			KV1235Z3	
* D	301 302 451 452 453 454 501 502 503 601			1SS133 (1SS176) (US1040M) RD6R8JSB2	
* D	551 754			(HZS6R8JB2)	
* D	701 702 703 705 706 707 708 709 710			1SS133 (1SS176) (US1040M)	
* D	711 712 802 922			1SS133 (1SS176) (US1040M)	
* D	751			S1B01-01	
* D	752			ERA15-02VH	
* D	753			2Z30	
* D	801			KV1310-6	
* D	919	LED		EBR3432S	
* D	920 921	LED		AA3432S	
* D	923			DA216	
L	52 53 501	Ferri-Inductor	15μH	LAU150K	
L	54 753	Inductor	10μH	CTF1053	
L	201	Inductor		CTF1056	
L	701	Inductor	6.8mH	CTF1051	
L	751	Coil		CTH1039	
L	801 802 804	Coil		CTC1006	
L	803	Coil		CTC1030	
L	805	Coil		CTE1001	
T	51	Coil		CTC1029	
T	201	Coil		CTB1011	
T	202	Coil		CTB1012	
T	203 204	Coil		CTB1013	
T	205	Coil		CTE1011	
T	206	Coil		CTE1012	
T	207	Coil		CTB1014	
T	801	Coil		CTE1002	
T	802	Coil		CTE1003	
CF	51	Ceramic Filter		CTF-182	
CF	201	Filter		CTF-100	
CF	202	Ceramic Resonator		CTF1039	

Mark	====	Circuit Symbol & No.	====	Part Name	Part No.
				FM Ceramic Filter	CTF-101
				Filter	CTF1004
					CWW1048
					CWW1128
					CWW1222
X	151			Ceramic Resonator	CSS1028
X	501			Xtal Resonator 4.5MHz	CSS1011
X	701			Xtal Resonator 194MHz	CSS1029
X	702			Buzzer	CPV1004
X	801			Xtal Resonator 50.59166MHz	CSS1001
** VR	51			Semi-fixed 22kΩ(B)	VRTB6VS223
** VR	101			Semi-fixed 10KΩ(B)	VRTB6VS103
** VR	251 252			Semi-fixed 470Ω(B)	VRTB6VS471
** VR	451/S 451			Volume	CCS1115
** IL	904			FM Front End	CWB1004
				Fuse 125V 6.3A	CEK1007
				Lamp 8V 60mA	CEL1066

RESISTORS

Mark	====	Circuit Symbol & No.	====	Part Name	Part No.
R	51 815 816 818			RD1/4PS473JL	
R	52 53 58 60 204 206 551 552 555 556			RD1/4PS101JL	
R	54 803			RD1/4PS682JL	
R	55 602			RD1/4PS392JL	
R	56 215 463 810			RD1/4PS104JL	
R	57 453 454			RD1/4PS273JL	
R	59 203 807			RD1/4PS470JL	
R	61 154 157 158 159 201 207 208 214			RD1/4PS103JL	
R	101 811			RD1/4PS103JL	
R	102 160 205 212 804			RD1/4PS153JL	
R	103 153 213 502 506 605 705 732 733			RD1/4PS472JL	
R	104			RD1/4PS823JL	
R	105			RS1/8S222J	
R	151			RS1/8S223J	
R	152 255 256			RS1/8S334J	
R	155 156 202 259 260 812 813			RD1/4PS332JL	
R	161 218 752 758			RD1/4PS223JL	
R	209 503 504 559 727 728 729 730 731 735			RD1/4PS102JL	
R	210 211 455 456 501 651 712 714 715 717			RD1/4PS473JL	
R	216 219 451 452 507 603 720			RD1/4PS103JL	
R	217 914 917			RD1/4PS100JL	
R	251 252 757			RD1/4PS221JL	
R	253 254			RD1/4PS133JL	
R	257 258 461 462 652			RD1/4PS272JL	
R	457 458 464 465 554 558 751 754 755 919			RD1/4PS222JL	
R	459 460			RS1/8S332J	
R	466			RD1/4PS151JL	
R	505			RD1/4PS152JL	
R	508 716			RD1/4PS101JL	
R	553 557			RD1/4PS010JL	
R	601			RS1/8S474J	
R	604 903 911			RD1/4PS562JL	
R	701 702 703 704 707			RS1/8S473J	
R	706			RS1/8S472J	
R	708 709 710 711 809 819			RS1/8S103J	

4041

## RESISTORS

Unit Number :

Unit Name : Switch P.C.Board

Mark ===== Circuit Symbol &amp; No. ==== Part Name Part No.

R 951	RD1/4PS181JL
R 952 953 954 955	RD1/4PS331JL

Unit Number :

Unit Name : P.C.Board

Mark ===== Circuit Symbol &amp; No. ==== Part Name Part No.

* D 1 2 3	1S1555
-----------	--------

Mark ===== Circuit Symbol &amp; No. ==== Part Name Part No.

** S 1	Switch(CST SET)	CSN-089
** S 2 3	Switch(CST IN 70 $\mu$ S)	CSN1003
* MR 1 2	Magnetic Resistive Device	SDME106B

## Miscellaneous Parts List

Mark ===== Circuit Symbol &amp; No. ==== Part Name Part No.

** S 901	Switch	CSH1001
* D 918	LED(DOOR)	AA4524K
** HD 1	Head Unit	CXA1534
** M 1 2	Motor(Head Gear)	CXM1030
** M 3	Motor(Capstan)	CXM1007

14. PACKING METHOD


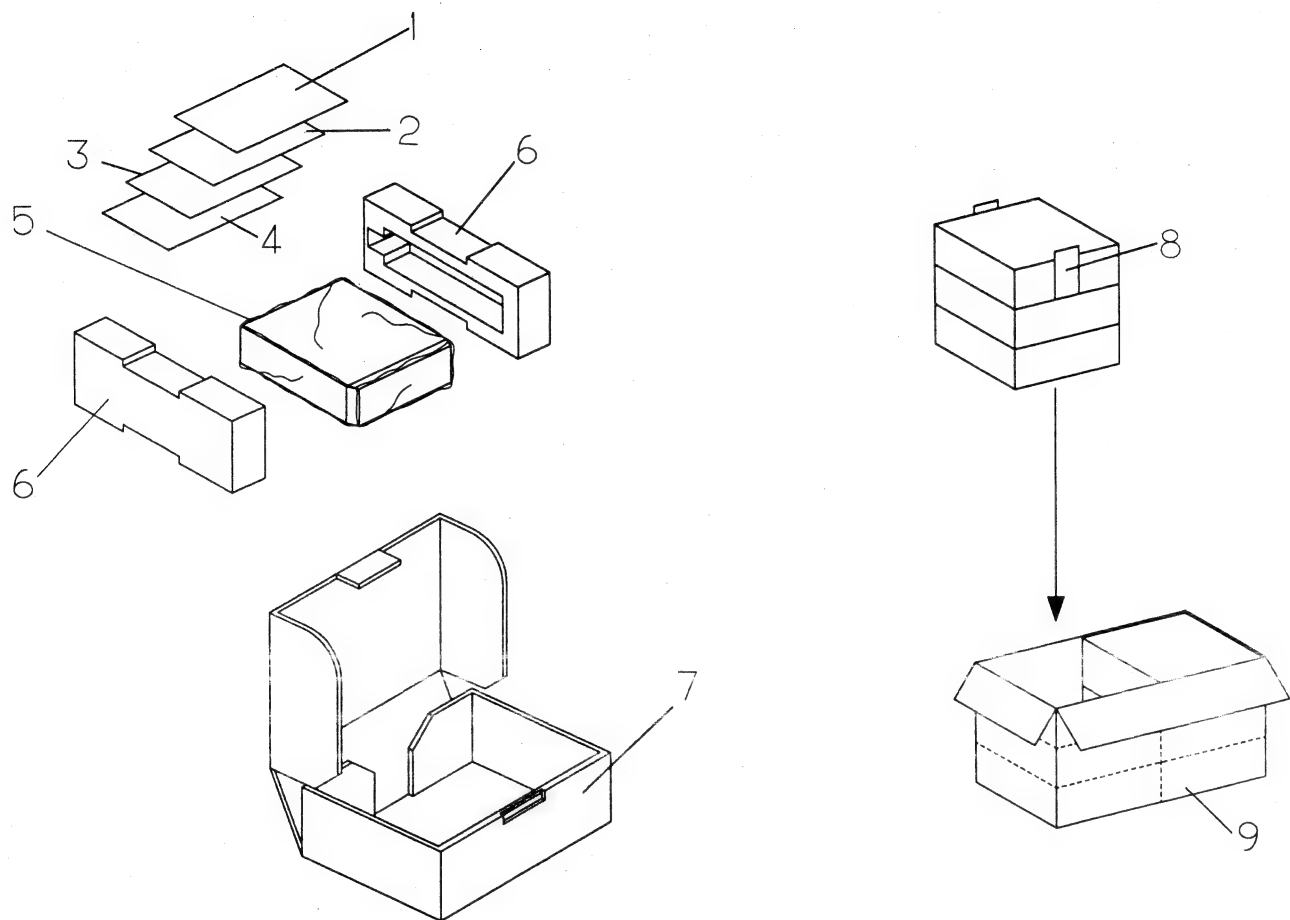


Fig. 15

● Parts List

Mark	No.	Part No.	Description
	1.	CRB1112	Owner's Manual
	2.	CRB1113	Installation Manual
	3.	CRB1105	WB Manual
	4-1.	CRY1005	Envelope
	4-2.		Lavel
	4-3.		Film (x2)
	4-4.	CRY1003	Card (x2)
	4-5.	CRW1014	Lavel
	4-6.	CRW1009	Tag
	5.	CEG-162	Polyethylene Bag
	6.	CHP1030	Styrofoam
	7.	CHG1483	Carton
	8.	CWH1009	Paper Sheet
	9.	CHL1461	Contain Box

## 15. CD MODE CONTROL LOCATION AND OPERATION (WITH CD CHANGER OPTION)

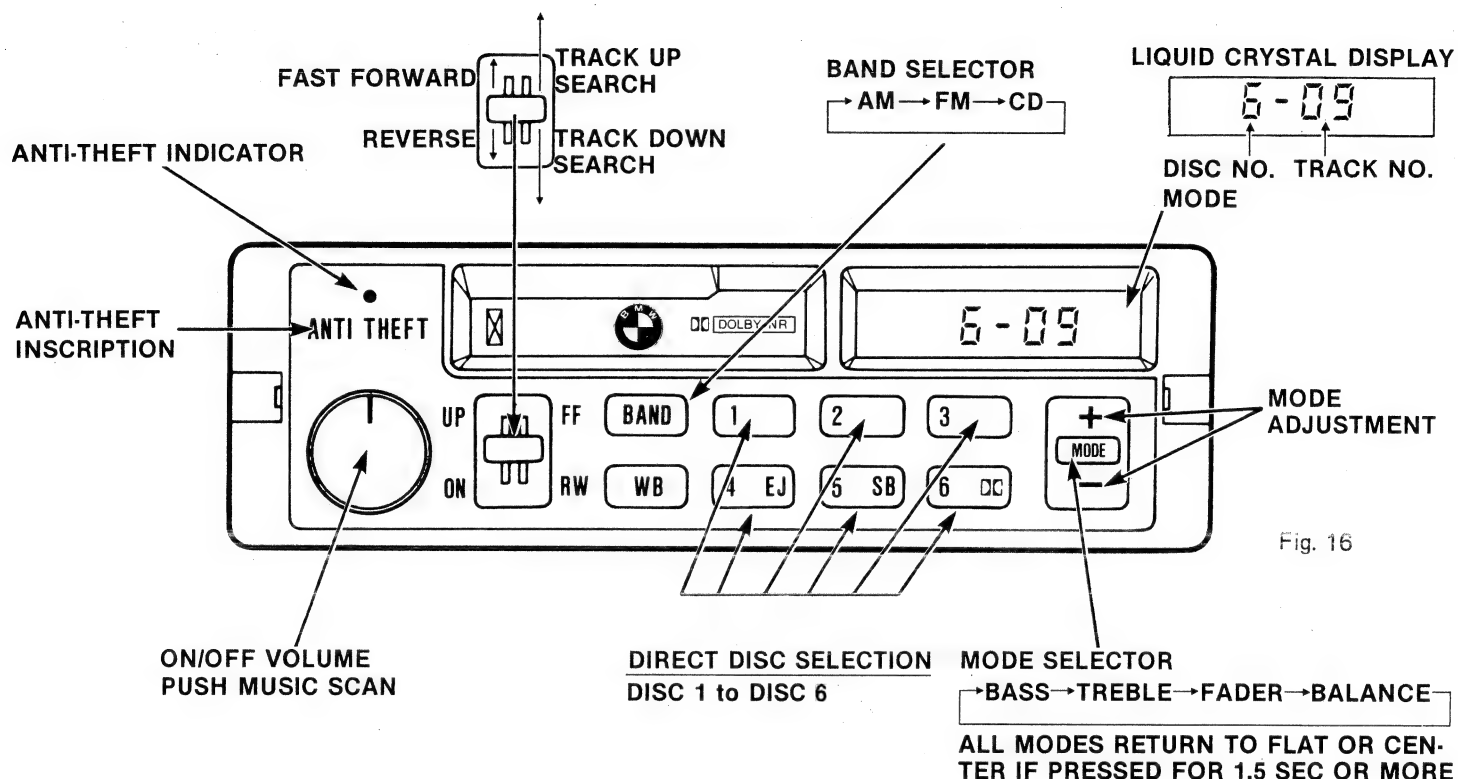

### CD OPERATION

To use the CD player, turn the radio on and press the BAND button. The display indicates AM, FM, or CD. Select CD to switch from radio mode to CD mode.

### DIRECT DISC SELECTION

DIRECT DISC SELECT buttons 1 through 6 correspond to the magazine tray numbers. When there is a disc in a tray, the number lights on the corresponding button. To play a disc in the magazine, press one of the buttons whose indicator is lit.

**NOTE:** Nothing will happen if you press a button whose indicator is not lit.

### FAST FORWARD/REVERSE

The UP/DN lever has a two-step operation. Raise the lever one step to fast forward; lower it one step to reverse.

### TRACK SEARCH

Raising or lowering the UP/DN lever two steps (as far as it can go) activates the track search mode. To advance to the next track, push the lever fully up. To return to the previous track, push the lever fully down. If you hold the lever in the fully up or fully down position, the player moves forward or backward through the tracks continuously.

### MUSIC SCAN

When the ON/OFF button is pressed, the word "SCAN" appears on the display and the player begins playing the first part (approximately 10 seconds) of each track on the current disc. Press the button again when you find a track you want to listen to: the player will return to normal playback and continue with the current track.

# Service Manual

**ORDER NO.  
CRT-468-0**

**CASSETTE MECHANISM ASSEMBLY**

## **CX-156 / A, CX-156 / B**

- This service manual is for cassette mechanism assembly used in car stereo components.
- Refer to the service manual for individual models for details on sections other than the cassette mechanism assembly.

Model	Service Manual	Cassette Mechanism Assembly
FX-K5/EW	CRT-469	CX-156/A
FX-K5B/EW		CX-156/A
FX-K5SDK/WG		CX-156/A
FEX-55/US, CA, CS	CRT-471	CX-156/A
FEX-50/ES	CRT-470	CX-156/A
KX-E60/EW	CRT-476	CX-156/B

Model	Service Manual	Cassette Mechanism Assembly

## CONTENTS

1. REPLACEMENT OF PARTS IN CASSETTE MECHANISM.....	1	4. EXPLODED VIEW .....	10
2. MECHANISM DESCRIPTION .....	4	5. CONNECTION DIAGRAM.....	13
3. ADJUSTMENT .....	8	6. SCHEMATIC CIRCUIT DIAGRAM .....	14
		7. ELECTRICAL PARTS LIST .....	14

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

**PIONEER ELECTRONICS (USA) INC.** P.O. Box 1760, Long Beach, California 90801 U.S.A.

TEL: (800) 421-1404, (800) 237-0424

**PIONEER ELECTRONIC (EUROPE) N.V.** Keetberglaan 1, 2740 Beveren, Belgium TEL: 03/775 28 08

**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.** 178-184 Boundary Road, Breeside, Victoria 3195, Australia  
TEL: (03) 580-9911

ES © DEC. 1984 Printed in Japan

# 1. REPLACEMENT OF PARTS IN CASSETTE MECHANISM

## • Belt and capstan motor (M3) replacement

1. Remove the four screws and the cover. (Fig. 1)
2. The belt in Fig. 2 can be replaced. (Be sure that the belt is not greased and not twisted.)
3. To replace the capstan motor, remove the two screws shown in Fig. 2.

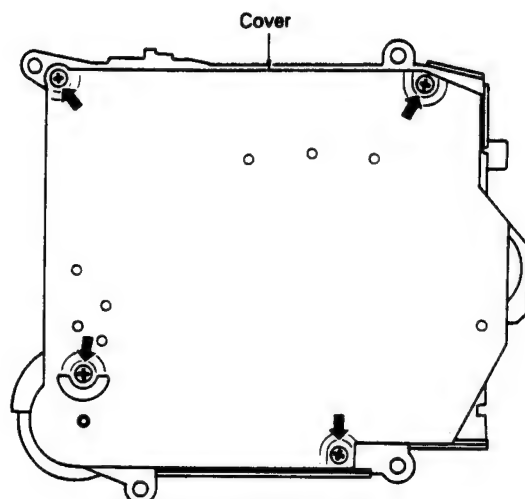


Fig. 1

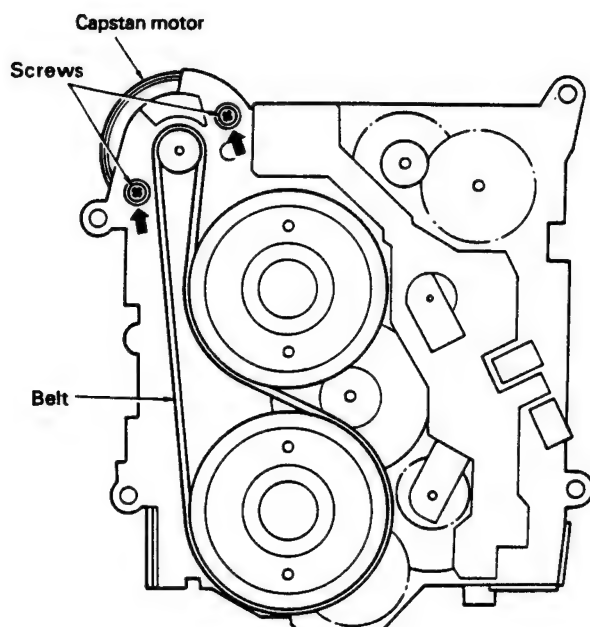


Fig. 2

## • Cassette holder removal

1. Turn the capstan motor until the cassette holder drops down. (Do not turn the flywheel directly by hand.)
2. Remove the screw labeled "B", the collar and the spring.
3. Remove unit "A" and the cassette holder "D" and "E".

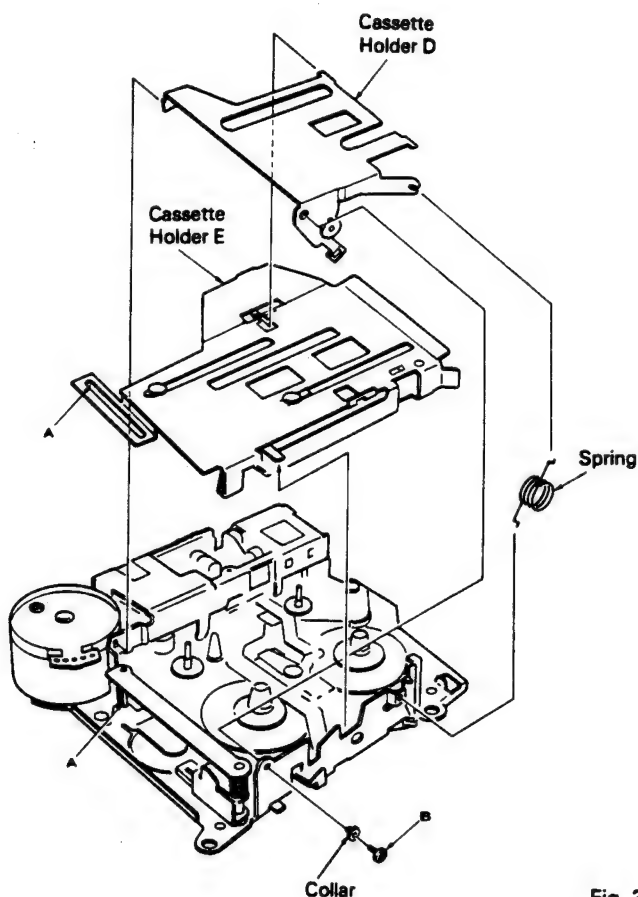


Fig. 3

### • Head unit replacement

1. Remove the washer and spring.
2. Remove the screw labeled "F", and the head unit can be removed in the opposite direction.
3. Be careful of the following point during reassembly.
  - Put the head unit pins through the lever holes. (One in front and one in back.)

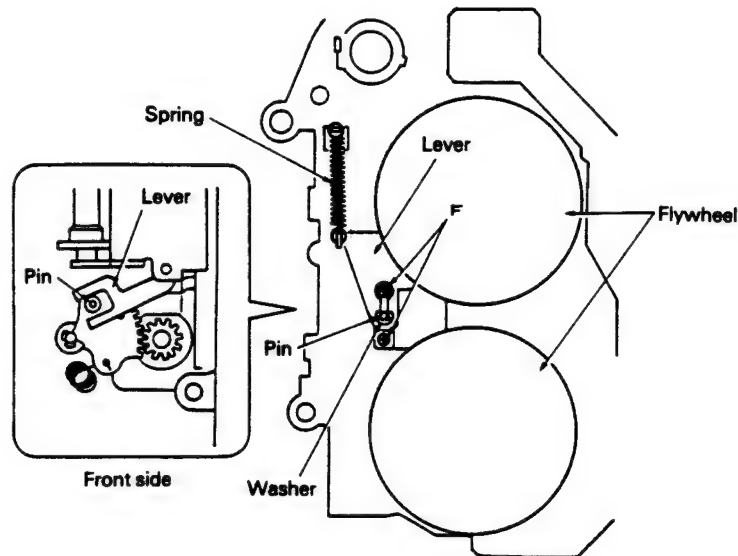


Fig. 4

### • Sub-motor replacement (M1 and M2)

1. Remove the two screws labeled "G" and remove the P.C. board unit.
2. The sub-motor can be removed by removing the three screws indicated by the arrows.
3. Sub-motor 2 (for switching the FF/REW gear) can be replaced when the spacer has been removed. (The motor fits very snugly, so some force must be used to remove it.)
4. Sub-motor 1 (for turning and positioning the head) can be replaced by removing the belt, lock washer, pulley and two screws labeled "J".


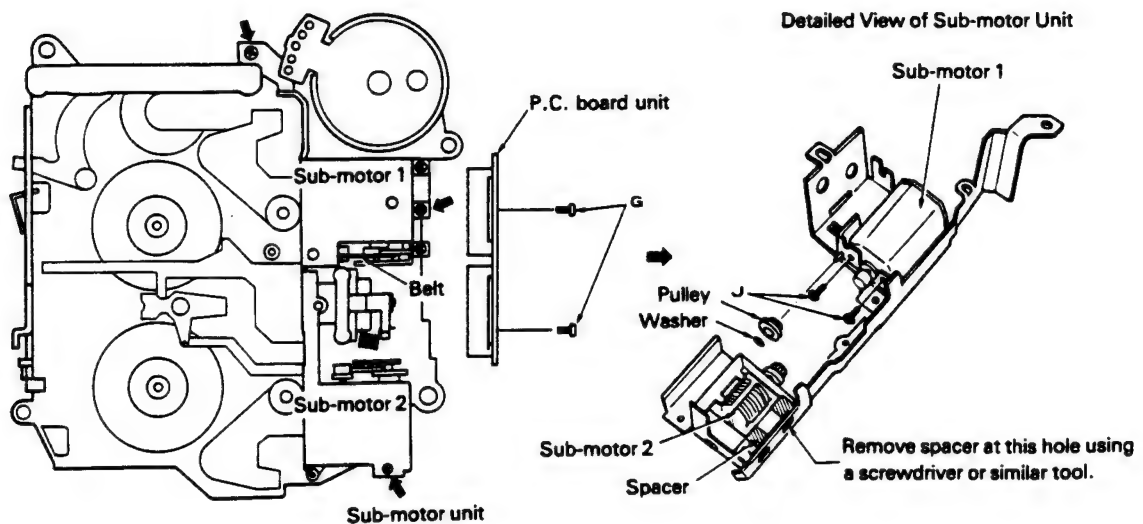


Fig. 5

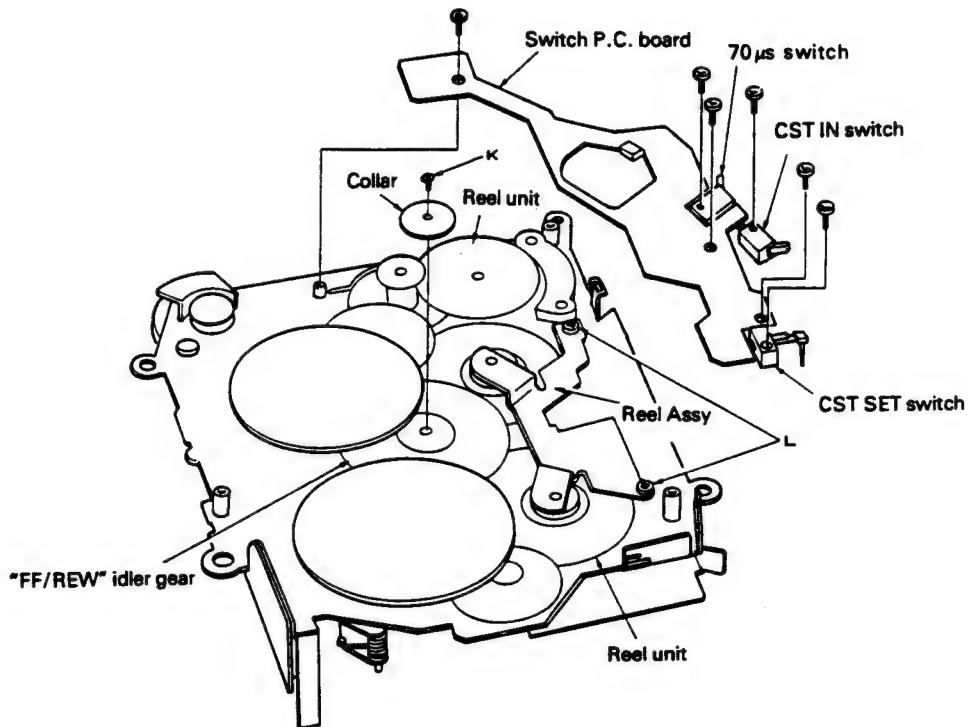

**• Reel unit replacement**

1. Remove the six screws and the switch P.C. board.
2. Remove the screw labeled "K" and the collar and free the FF/REW idler gear.
3. The reel assy can be replaced by removing the two screws labeled "L" and removing the reel unit.

**Fig. 6**

## 2. MECHANISM DESCRIPTION

Cassette mechanism assy for CX-156/A is used in this mechanism description.

### 1. Outline of Mechanism

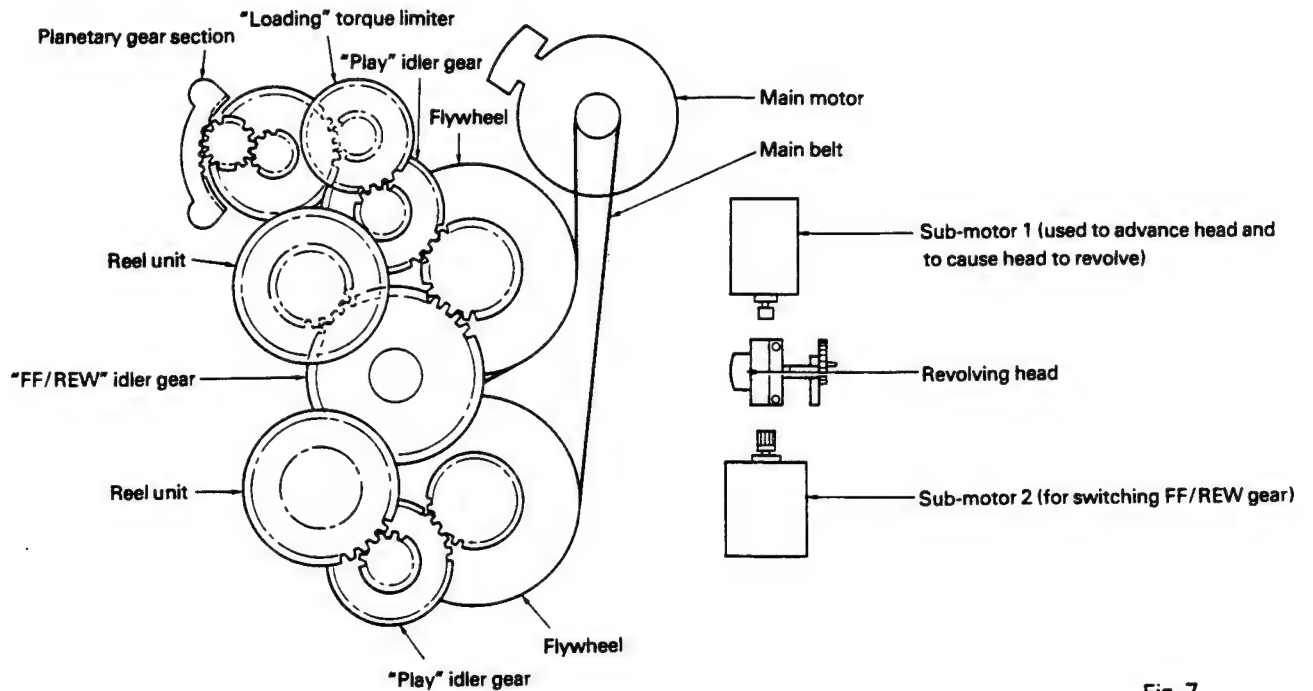


Fig. 7

### 2. Loading/Eject Function

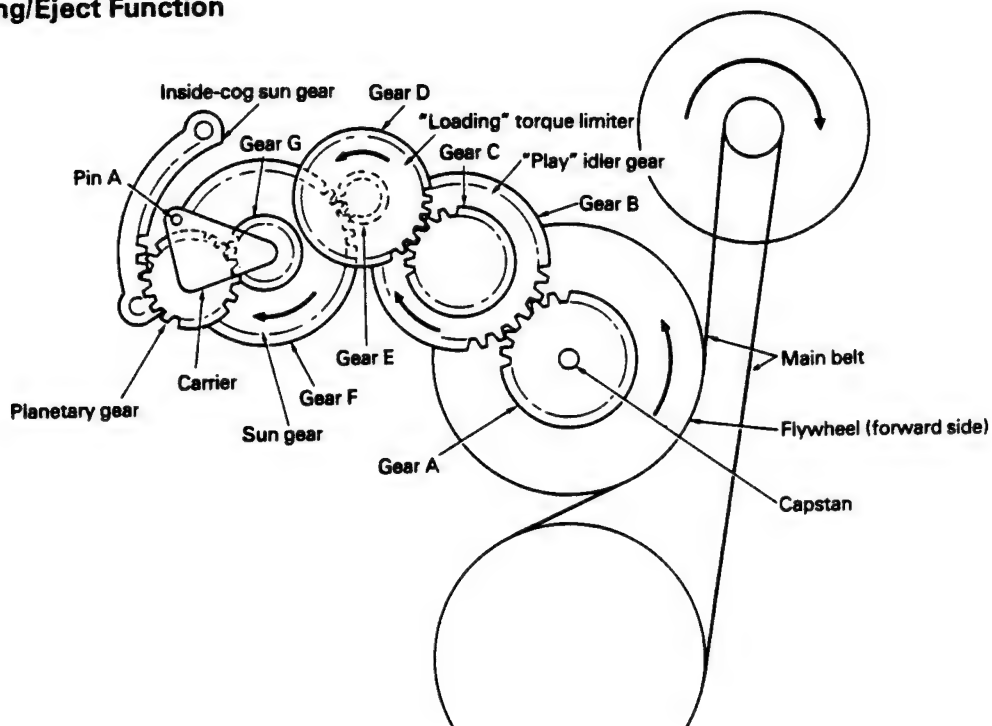


Fig. 8

### 3. Cassette Tape Load and Eject Mechanism

#### • Cassette tape loading operation

1. Push the cassette tape lightly in the direction indicated by the arrow. (As shown in Fig. 10, arm "A" and arm "B" connect to spring "A". These are also connected to common axis shaft "A", which is attached to the chassis surface and acts as a swivel. Pin "A", which is caulked to the planetary gear unit carrier, goes through the chassis and fits into the oblong hole of arm "B". Because pin "A" won't move as long as the capstan motor isn't moving, arm "B" won't move either.)
2. When a cassette tape is loaded, arm "A" moves in the direction indicated by the arrow and spring "A" loosens. Lever "A" also moves in the direction indicated by the arrow, and the catch at left of the lever releases arm "C". Arm "C" then turns counterclockwise and opens the CST IN switch. The capstan motor then begins turning forward.
3. The carrier then moves clockwise because the planetary gear moves along the inside-cog sun gear. Pin "A" which is caulked to the carrier also moves in the same direction. (Fig. 11) The movement of pin "A" is causing arm "B" to move counterclockwise. Arm "A" turns in the same fashion and the "A" unit of lever "A" draws the cassette tape in. (Fig. 9)

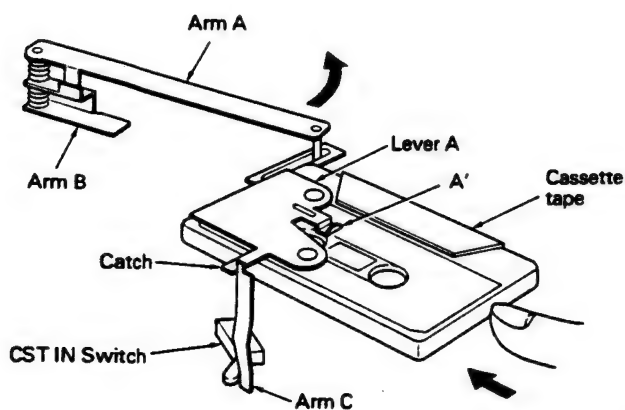


Fig. 9

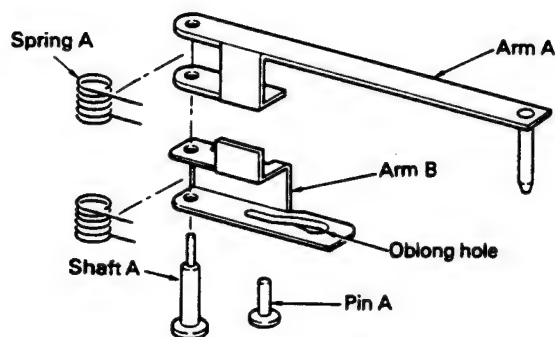


Fig. 10

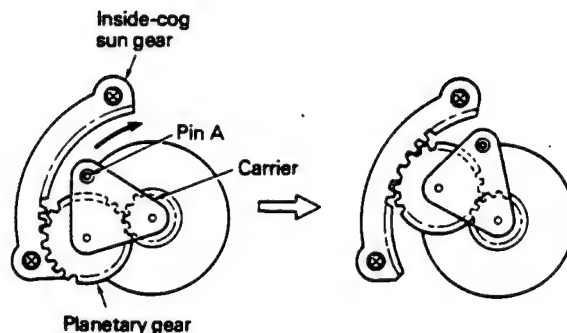


Fig. 11

4. The oblong hole of arm "B" is as shown in Fig. 12. The cassette tape draw-in process will be complete when the pin "A" degree of rotation is  $\theta$ . Arm "B" will not move while the degree of rotation is  $\theta'$ .

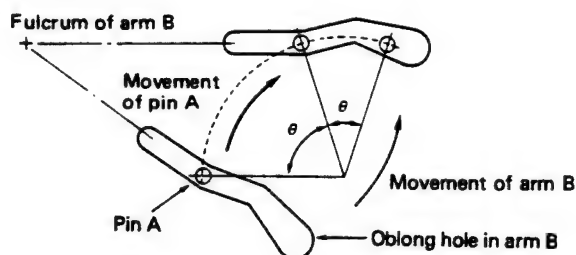


Fig. 12

5. As shown in Fig. 13, arm "C" (caulked to the chassis swivel) is fixed to pin "A" and when the degree of rotation is  $\theta$  arm "C" is stationary, and when it is  $\theta'$  arm "C" turns clockwise.

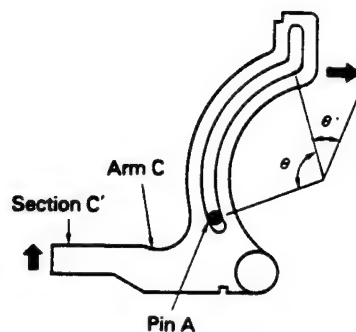


Fig. 13

6. As shown in Fig. 14, the "C" unit of arm "C" connects to the cassette arm (which suspends the cassette tape) through spring "C". The arm "C" movement described above in paragraph five makes the "C" unit move in the direction indicated by the arrow in Fig. 14. The cassette arm pushes down holder "A" by means of spring "B". The "C" unit is released when holder "A" drops down.
7. In order for the capstan motor to keep turning forward, the planetary gear disengages from the inside-cog sun gear and becomes free.

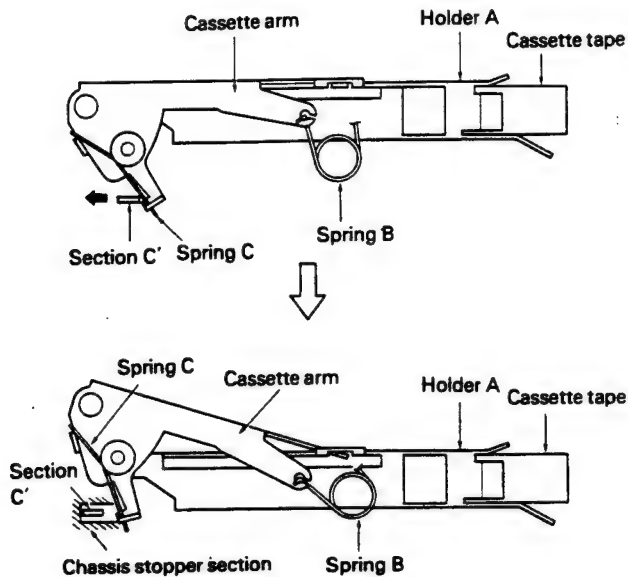


Fig. 14

### • Eject operation

1. Turning on the eject switch reverses the capstan motor. As shown in Fig. 15, spring "D" places slight friction on the planetary gear which causes it to engage with the inside-cog sun gear. The cassette tape is ejected following an operation opposite to the loading operation.

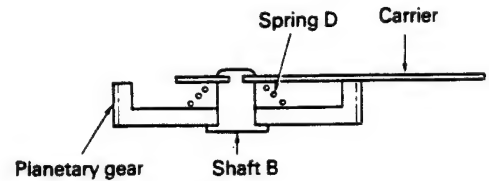


Fig. 15

### 4. Head Turning and Head Positioning Operations (during forward play)

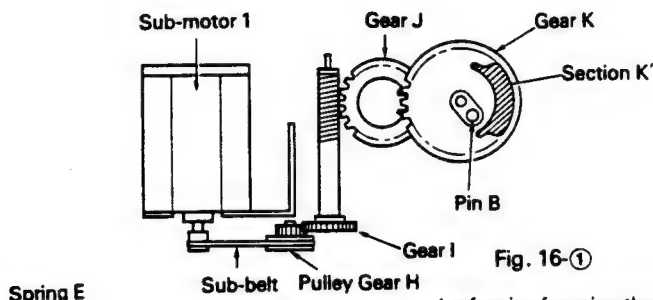


Fig. 16-1

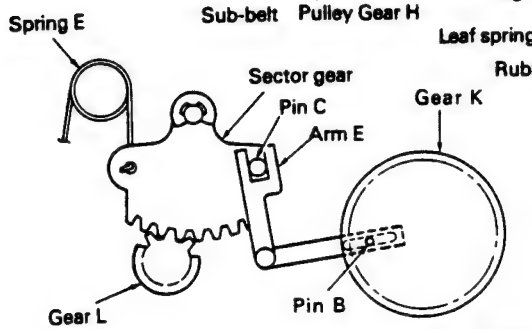


Fig. 16-3

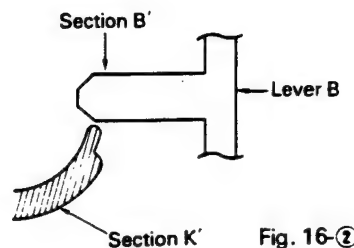


Fig. 16-2

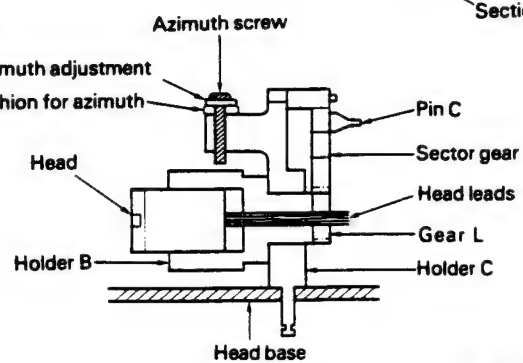


Fig. 16-4

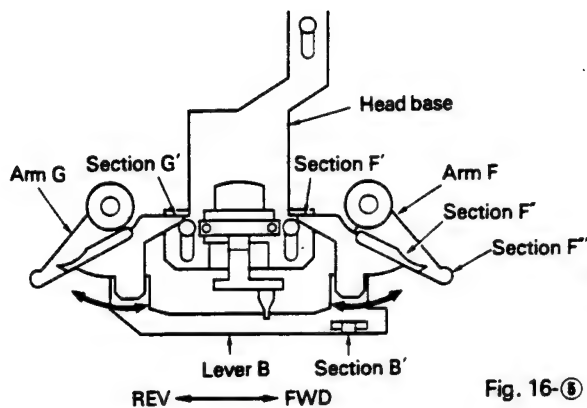


Fig. 16-⑥

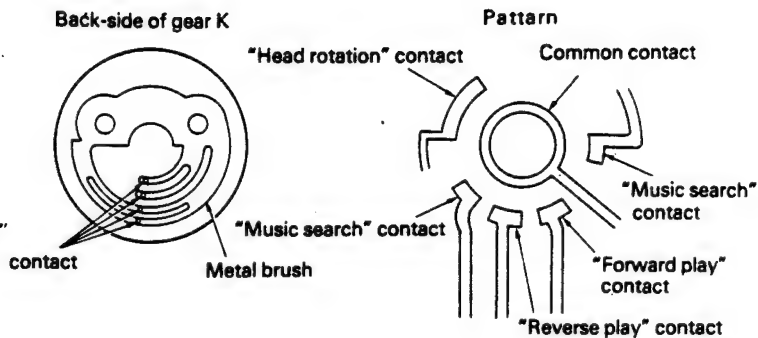


Fig. 16-⑦

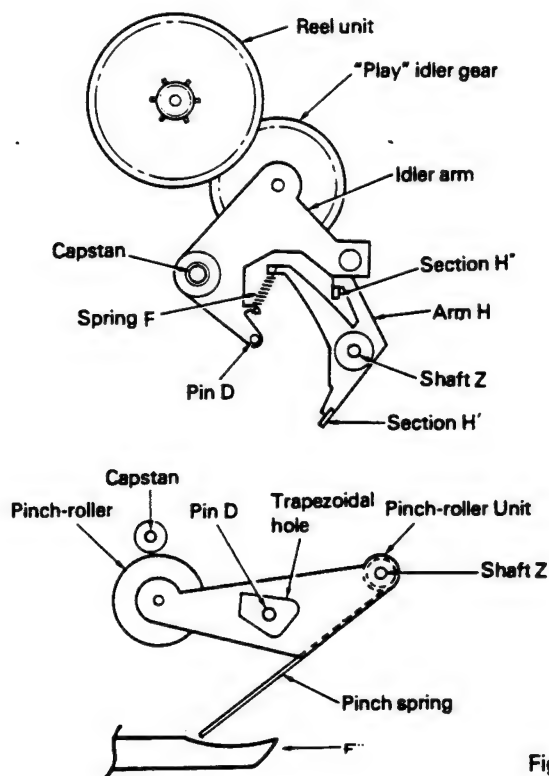


Fig. 17

1. The sub-belt from sub-motor 1 goes through pulley gear "H", gear "I", gear "J" and turns gear "K". Head turning and head base positioning take place using the "K" unit (the projecting unit) of gear "K" and pin "B". There is a metal brush attached to the back of gear "K" which detects the passing through of all patterns and common patterns and stops sub-motor 1. This controls the head positioning, the head turning, the contact pressure of the play idler gear and the contact pressure of the pinch roller.
2. Head turning at pin "B" takes place until gear "K" starts turning which brings the "K" part into contact with the lever "B", "B" part. (Fig. 16-③)
3. Pin "B" engages with the arm "E" oval opening and rotates arm "E". The arm "E" sector gear is engaged with pin "C" and this turns the head. The head rotation pattern (Fig. 16-⑥) performs this operation inside a certain angle.
4. When gear "K" turns it also pushes the lever "B", "B" part. The "B" part turns arm "F" and arm "G" counter-clockwise and advances head base with the arm "G", "G" part. (Fig. 16-②, ⑤)
5. After the head base goes beyond the MS pattern (Fig. 16-⑥) position, the arm "F", "F" part pushes the pinch roller unit pinch spring and presses the pinch roller down onto the capstan. (Fig. 17)
6. Simultaneously, the arm "F", "F" unit pushes the arm "H", "H" part. The "H" part lock releases when pushed, and the play idler gear comes into contact with the reel unit. Play operation begins because of this. (Fig. 16-⑤, Fig. 17)
7. When going from play to eject, first, the pinch roller disengages from the capstan, and then using the pinch roller unit trapezoidal hole, releases the idler arm from the reel unit by means of pin "D". After that, the "H" unit again meshes with the idler arm and the "play" idler gear stops after completely disengaging from the reel unit.

## 5. FF/REW Operation

1. As with the head operations a brush is attached to the back of gear "P" and using patterns and the brush, position sensing takes place and this controls the FF/REW operation.
2. Sub-motor 2 goes through gears "L", "M" and "N" and turns gear "P". When gear "P" turns, arm "J" rotates by means of arm "J". Arm "I" rotates the FF/REW idler gear and engages it with the reel unit.

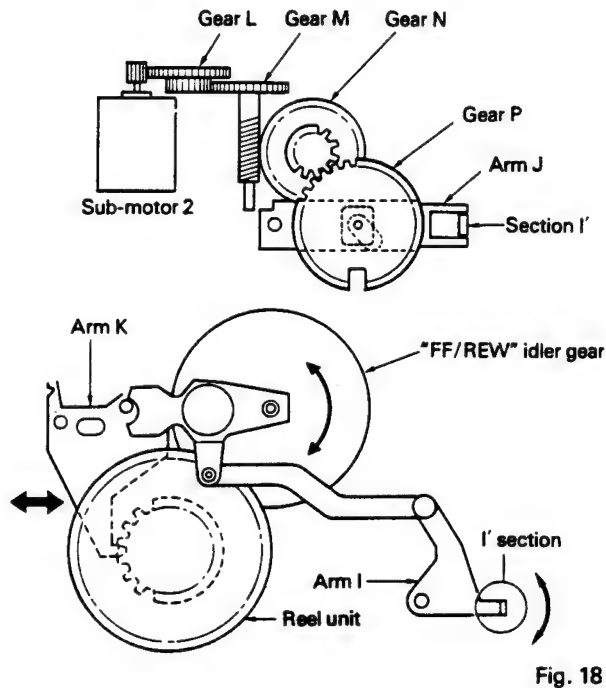


Fig. 18

## 3. ADJUSTMENT

### 3.1 AZIMUTH ADJUSTMENT

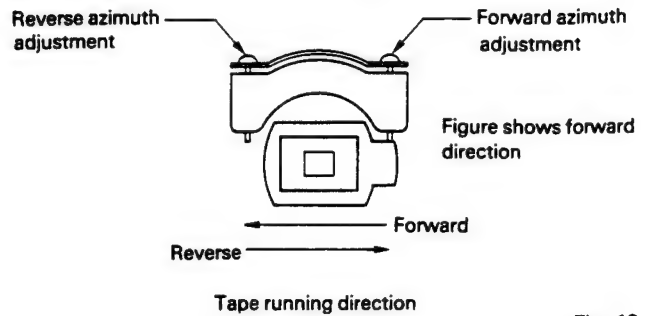


Fig. 19

#### • To Adjust

1. Play "A" side of STD-341A (10kHz, -20dB). Adjust each screw for maximum output in forward and reverse directions.
2. Play "B" side in forward and reverse directions to confirm adjustment.

### 3.2 TAPE SPEED ADJUSTMENT

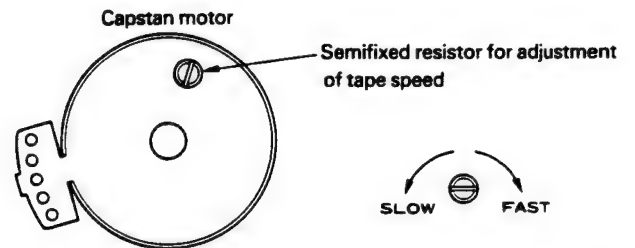


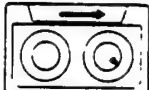



Fig. 20

#### • To Adjust

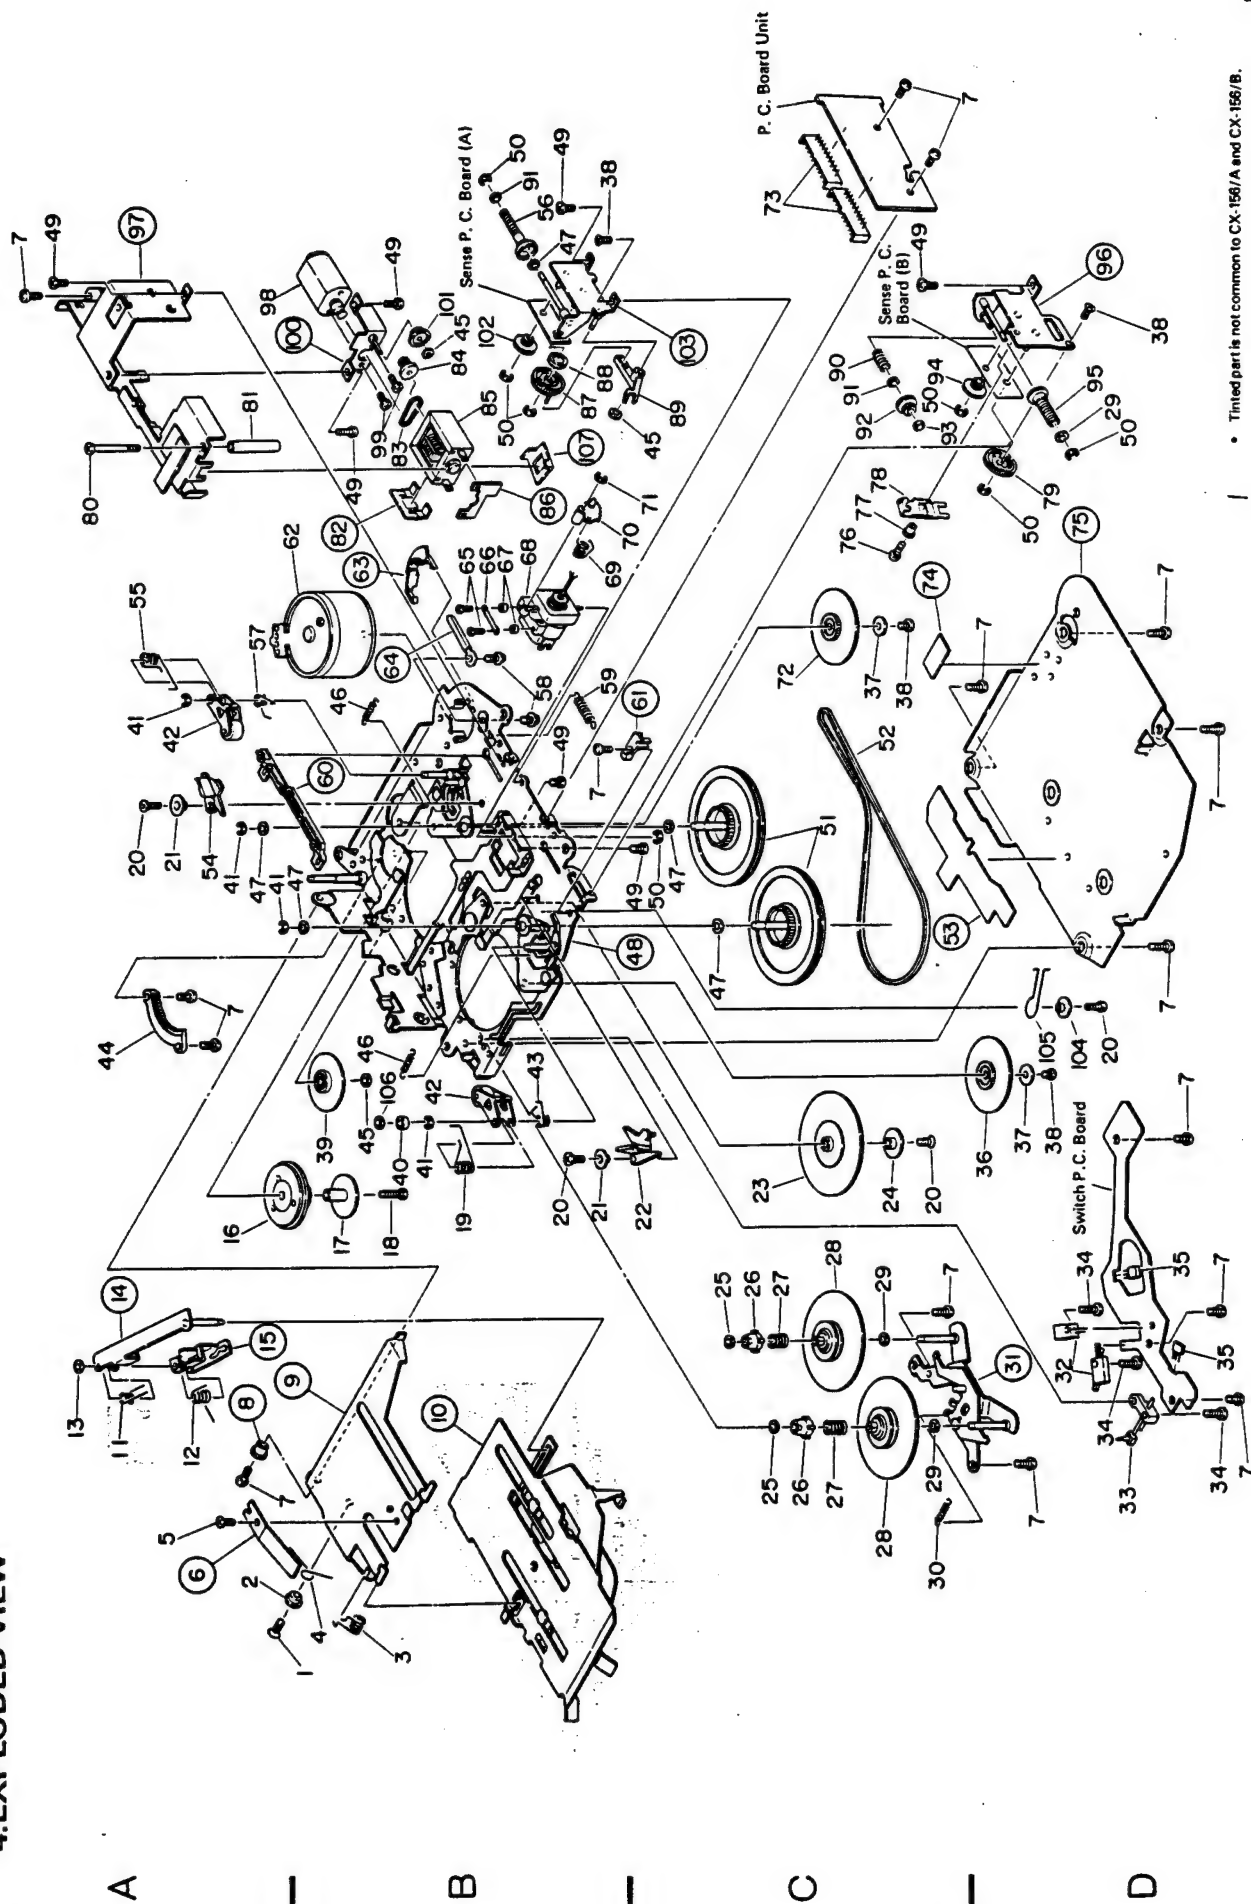
1. Reproduce STD-301 (3kHz, -10dB). Adjust the semifixed resistor so that the frequency counter shows 3,010Hz (+30Hz, -30Hz).

## 3.3 CHECK POINTS OF CASSETTE MECHANISM

<p>Confirm the following items when replacing parts of the cassette mechanism.</p>	<p>■ Tape speed deviation:</p> $3,000 \pm \frac{90}{30} \text{ Hz}$ $(4.76 \text{ cm/s} \pm \frac{3}{1} \%)$ <p>Using an STD-301, measure the speed at the start and end of winding and see that a deviation remains within the limits each time. If values indicated by the pointer vary considerably, adjust to 70% of the minimum and maximum values. Measuring time shall be 5~6 seconds.</p>	<p>■ Wow and flutter: Less than 0.15% (WMS)</p> <p>Using an STD-301, measure the wow and flutter at the start and end of winding and take the maximum value. If values indicated by the pointer vary considerably, adjust to 70% of the minimum and maximum values. Measuring time shall be 5~6 seconds.</p>
<p>■ Fast forward and rewinding time:</p> <p>95 ~ 115 seconds</p> <p>Using a C-60, set to fast forward and rewind, and measure the time with a stop watch.</p>	<p>■ Winding torque:</p> <p>40 ~ 60g · cm</p>  <p>Using a cassette type torque meter (100 g · cm), measure the minimum value while in the play mode. Measuring time shall be 5 ~ 6 seconds.</p>	<p>■ F.F. torque:</p> <p>70 ~ 110g · cm</p>  <p>Using a cassette type torque meter (120 g · cm), measure the value when the tape stops in the F.F. mode.</p>
<p>■ REW torque:</p> <p>70 ~ 110g · cm</p>  <p>Using a cassette type torque meter (120 g · cm), measure the value when the tape stops in the REW mode.</p>	<p>■ Back tension torque:</p> <p>2.0 ~ 3.5g · cm</p>  <p>After setting in the REW mode without loading a cassette tape for 5 minutes, measure the back tension torque in the play mode, using a cassette type torque meter.</p>	<p>■ Cassette loading force:</p> <p>450 ~ 550 g</p> <p>Push the center of the cassette and measure the force with a tension meter (1 kg).</p>



## 4. EXPLODED VIEW





## NOTE:

- For your Parts Stock Control, the fast moving items are indicated with the marks ★ ★ and ★.

★ ★: GENERALLY MOVES FASTER THAN ★.

This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.

- Parts whose parts numbers are omitted are subject to being not supplied.

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1.	HBA-193	Screw M1.4×3.5		53.		Insulator
	2.	CLB-691	Collar		54.	CNW-931	Arm
	3.	CBH-837	Spring		55.	CBH-831	Spring
	4.	CBH-867	Spring		56.	CNW-956	Gear
	5.	HBA-147	Screw M1.4×1.4		57.	CBH-833	Spring
	6.		Spring		58.	PMS26P030FMC	Screw
	7.	BMZ20P040FMC	Screw		59.	CBH-830	Spring
	8.		Bush		60.		Lever
	9.		Arm		61.		Spacer
	10.		Holder Unit (CX-156/A)	★ ★	62.	CXM-161	Motor (Capstan)
			Holder Unit (CX-156/B)		63.		Clamper
	11.	CBH-836	Spring (CX-156/A)		64.		Clamper
		CBH-887	Spring (CX-156/B)		65.	CBA-173	Screw M1.4×8
	12.	CBH-886	Spring		66.	CBE-114	Spring
	13.	CBF-046	Washer		67.	CNY-134	Azimuth Rubber
	14.		Arm Unit	★ ★	68.	CXD-758	Head Unit
	15.		Arm		69.	CBH-829	Spring
	16.	CXD-388	Gear Unit		70.	CNW-939	Gear
	17.	CLB-617	Collar		71.	YE15FUC	Washer
	18.	CBA-166	Screw M1.7×8		72.	CNW-943	Gear
	19.	CBH-832	Spring		73.	CKS-534	Plug
	20.	HBA-310	Screw M2×3.5		74.		Insulator
	21.	CLB-612	Collar		75.		Cover
	22.	CNW-930	Arm		76.	HBA-158	Screw M1.4×5
	23.	CNW-944	Gear		77.	CLB-750	Collar
	24.	CLB-616	Collar		78.	CNH-004	Arm
	25.	CBF-135	Washer		79.	CNW-953	Gear
	26.	CNW-932	Collar		80.	CBA-165	Screw M2
	27.	CBH-827	Spring		81.	CLB-749	Spacer
★ ★	28.	CXD-384	Reel Unit		82.		Spacer
	29.	CBF-088	Washer	★ ★	83.	CNT-114	Belt
	30.	CBH-868	Spring		84.	CNW-941	Gear
	31.		Bracket Unit	★ ★	85.	CXM-351	Motor (Gear Position)
★ ★	32.	CSN-091	Switch (70μs, CST IN)		86.		P.C. Board
★ ★	33.	CSN-089	Switch (CST SET)		87.	CNW-952	Gear
	34.	CBA-172	Screw M1.7×5.5		88.	CNN-481	Spacer
★	35.	SDME106A	Magnetic Resistive Device		89.	CNW-958	Arm
	36.	CNW-943	Gear		90.	CBH-866	Spring
	37.	CLB-615	Collar		91.	HBF-116	Washer
	38.	HBA-209	Screw M2×2		92.	CNW-954	Gear
	39.	CNW-950	Gear		93.	CBF-135	Washer
	40.	CLB-690	Roller		94.	CNY-077	Gear
	41.	EBG-001	Washer		95.	CNY-148	Gear
★ ★	42.	CXD-387	Pinch Roller Unit		96.		Holder Unit
	43.	CBH-834	Spring		97.		Guide
	44.	CNW-951	Gear	★ ★	98.	CXM-452	Motor (Head Position)
	45.	CBF-126	Washer		99.	HBA-244	Screw M1.4×1.6
	46.	CBH-835	Spring		100.		Bracket Unit
	47.	HBF-179	Washer		101.	CNY-075	Pulley
	48.		Chassis Unit (CX-156/A)		102.	CNW-955	Gear
			Chassis Unit (CX-156/B)		103.		Holder Unit
	49.	HBA-175	Screw M2×2.5		104.	CLB-760	Collar
	50.	YE12FUC	Washer		105.	CBH-893	Spring
	51.	CNW-942	Flywheel		106.	HBF-180	Washer
★ ★	52.	CNT-111	Belt		107.		Cover

## 5. CONNECTION DIAGRAM


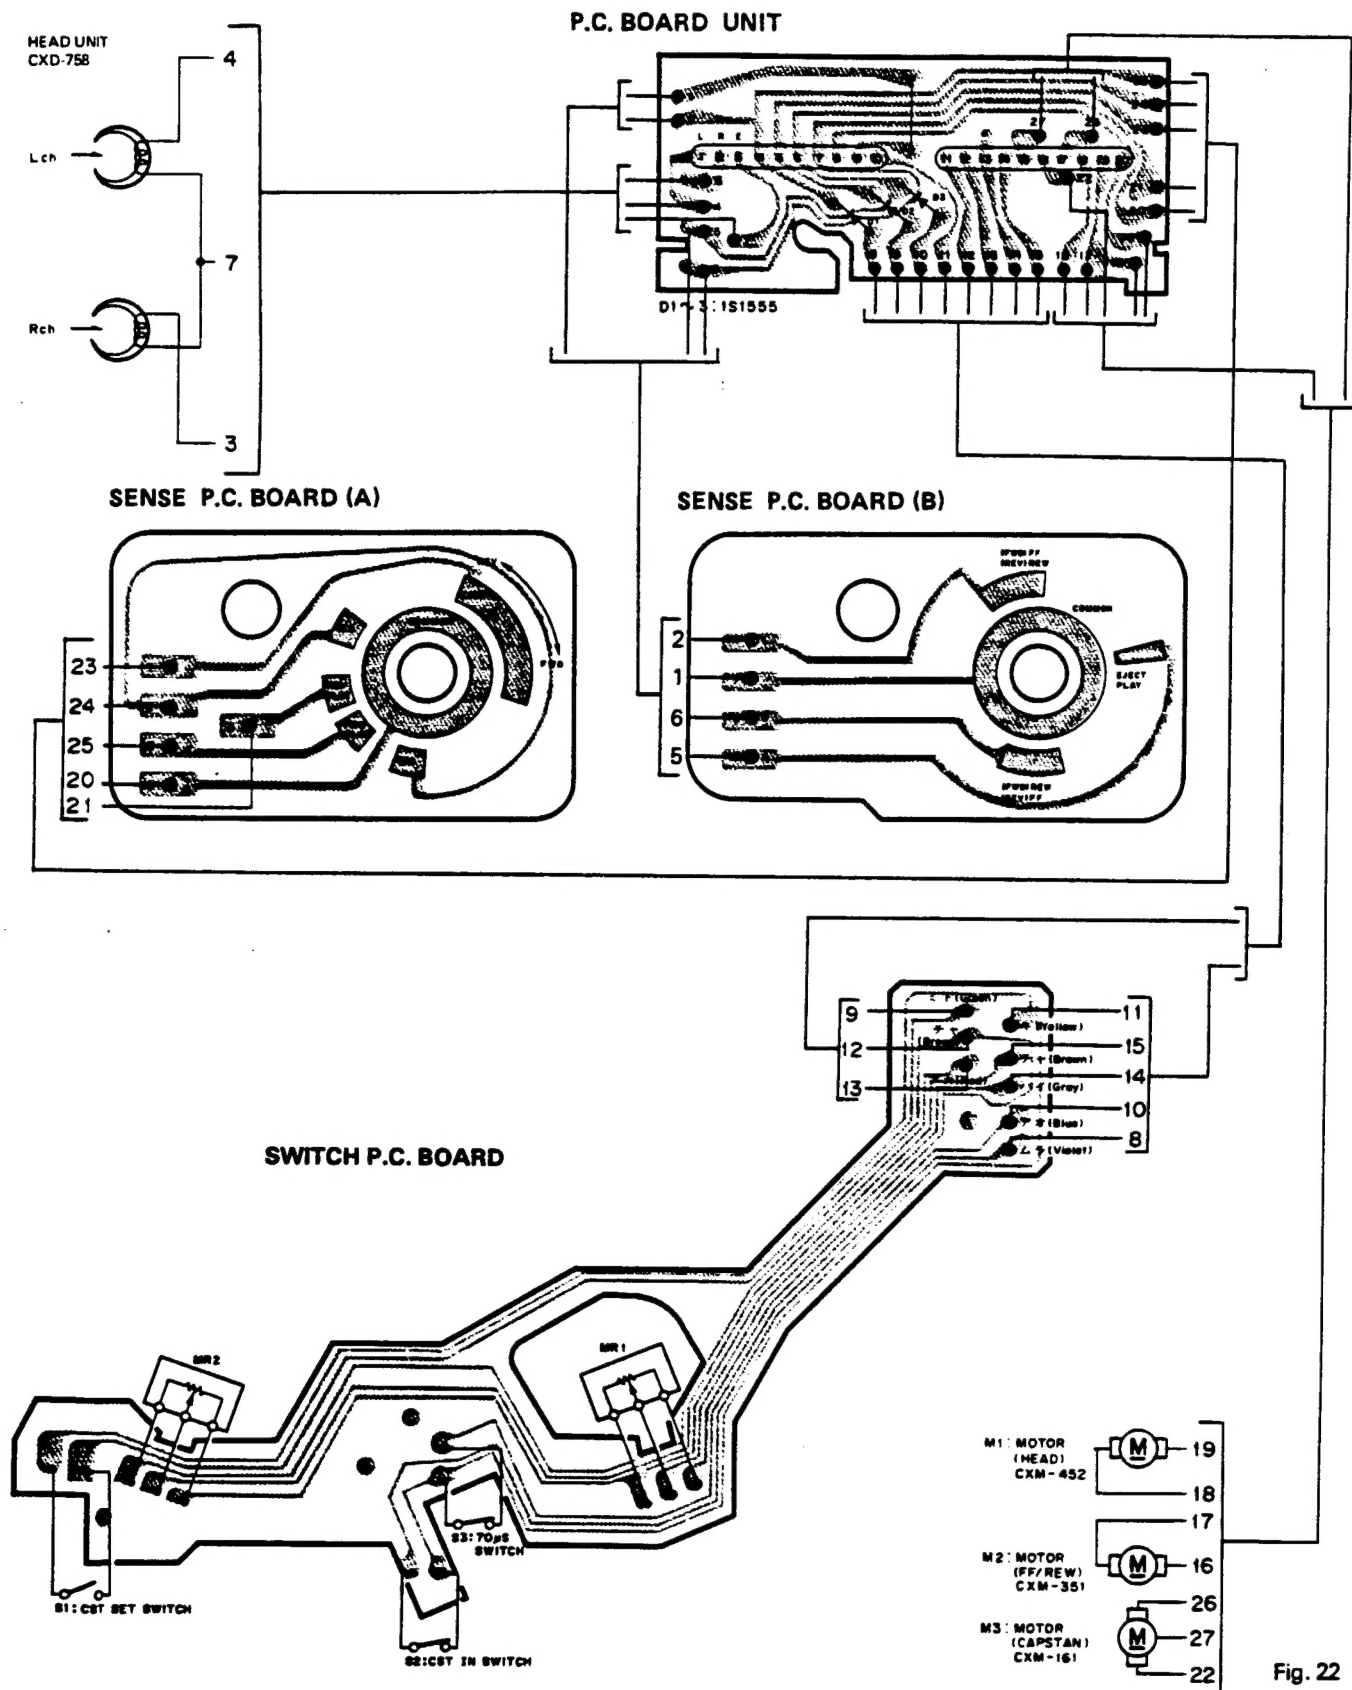


Fig. 22

## 6. SCHEMATIC CIRCUIT DIAGRAM

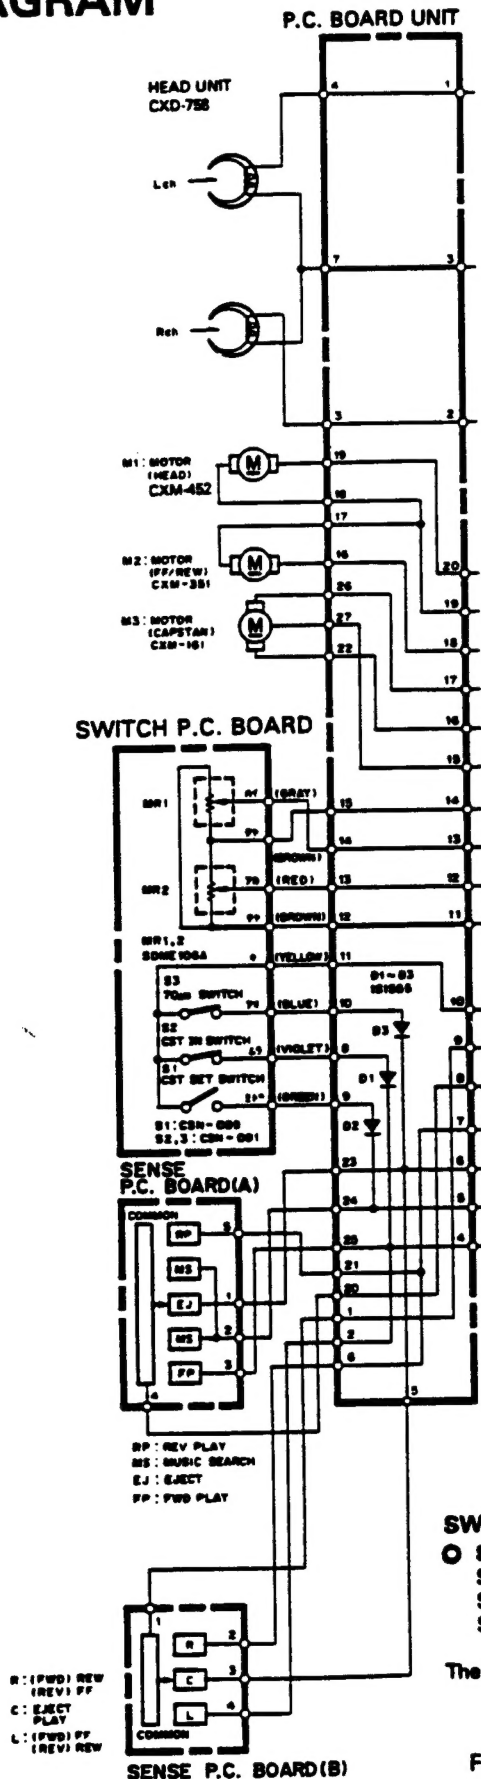

## 7. ELECTRICAL PARTS LIST

### Switch P.C. Board

Mark	Symbol & Description	Part No.
★ ★	S1 Switch (CST SET)	CSN-089
★ ★	S2, S3 Switch (CST IN, 70 μs)	CSN-091
★	MR1, MR2 Magnetic Resistive Device	SDME108A

### P.C. Board Unit

Mark	Symbol & Description	Part No.
★	D1 - D3	1S1555

### Miscellaneous Parts List

Mark	Symbol & Description	Part No.
★ ★	Head Unit	CXD-758
★ ★	M1 Motor (Head)	CXM-452
★ ★	M2 Motor (Gear)	CXM-351
★ ★	M3 Motor (Capstan)	CXM-161

Fig. 23